


Cash Register

ECR 5900

USER'S GUIDE

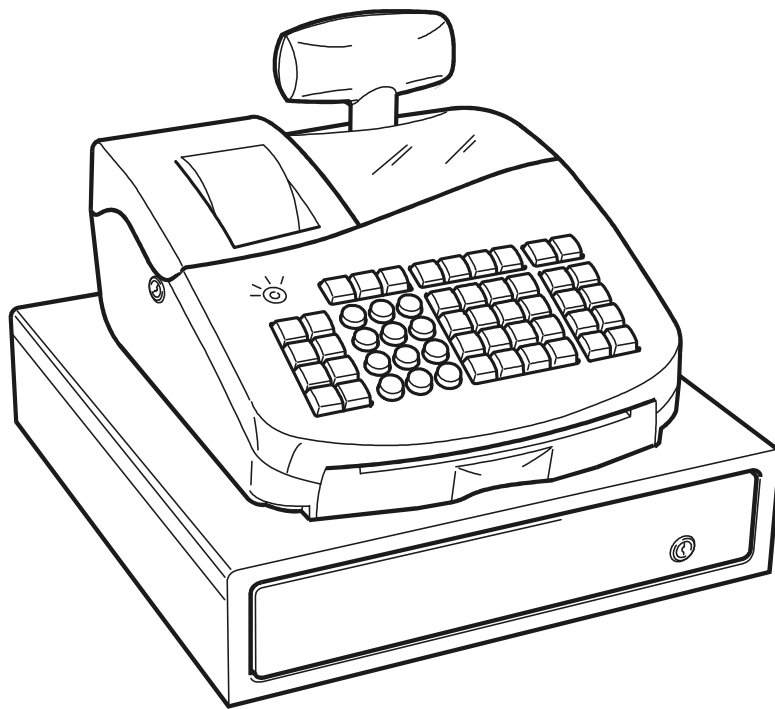

olivetti

PUBLICATION ISSUED BY:

Olivetti S.p.A.
www.olivetti.com

Copyright © 2005, Olivetti
All rights reserved



Your attention is drawn to the following actions that could compromise the characteristics of the product:

- incorrect electrical supply;
 - incorrect installation; incorrect or improper use, or, in any case, not in accordance with the warnings given in the User Manual supplied with the product;
 - replacement of original components or accessories with others of a type not approved by the manufacturer, or carried out by unauthorized personnel.
-

Nous attirons votre attention sur les actions suivantes qui peuvent compromettre la conformité attestée ci-dessus et les caractéristiques du produit:

- Alimentation électrique erronée;
 - Installation ou utilisation erronée ou non conforme aux indications exposées dans le manuel d'utilisation fourni avec le produit;
 - Remplacement de composants ou d'accessoires originaux par des pièces non approuvées par le constructeur, ou effectué par du personnel non autorisé.
-

Wir möchten Sie darauf hinweisen, daß folgende Aktionen die oben bescheinigte Konformität und die Eigenschaften des Produkts beeinträchtigen können:

- Falsche Stromversorgung;
 - Installations- oder Bedienungsfehler bzw. Nichtbeachtung der Hinweise in der Bedienungsanleitung, die mit dem Produkt geliefert wurde;
 - Das Auswechseln von Bauteilen oder Originalzubehör durch Unbefugte oder das Ersetzen durch Teile, die nicht vom Hersteller anerkannt werden.
-

Prestar mucha atención a las siguientes acciones que pueden comprometer la conformidad arriba certificada y, obviamente, las características del producto:

- Alimentación eléctrica errónea;
 - Instalación o uso erróneos, improprios o no conformes con las advertencias detalladas en el manual de uso suministrado con el producto;
 - Sustitución de componentes o accesorios originales con otros no aprobados por el fabricante o bien efectuada por parte personal no autorizada.
-

Het is belangrijk te weten dat de volgende acties nadelige gevolgen kunnen hebben voor de goede werking van het product:

- het verkeerd aansluiten van een stroombron;
 - onjuiste installatie; onjuist of oneigenlijk gebruik, of handelingen die worden uitgevoerd zonder inachtneming van de waarschuwingen in de handleiding bij het product;
 - vervanging van originele onderdelen of accessoires door onderdelen of accessoires van een type dat niet is goedgekeurd door de fabrikant, of vervanging die wordt uitgevoerd door onbevoegd personeel.
-

Chamamos a sua atenção para as seguintes acções que podem comprometer o desempenho do produto:

- abastecimento de corrente não adequado;
 - instalação incorrecta, utilização incorrecta ou indevida, ou não respeitando os avisos descritos no Manual do Utilizador que é fornecido com o produto;
 - substituição de componentes originais ou acessórios por outros de tipo não aprovado pelo fabricante, ou substituição realizada por pessoal não autorizado.
-

Vær opmærksom på, at følgende handlinger kan beskadige produktet:

- Forkert strømforsyning.
 - Forkert installation, ukorrekt eller forkert brug eller, som under alle omstændigheder, ikke er i overensstemmelse med advarselne i den medfølgende Brugervejledning.
 - Udskiftning af originale dele eller tilbehør med andre typer, som ikke er godkendt af fabrikanten, eller foretaget af uautoriseret personer.
-

Vi önskar fästa din uppmärksamhet på verksamheterna som anges nedan, eftersom dessa kan kompromittera produktens egenskaper:

- oriktig strömförsörjning;
 - oriktig installation; oriktig eller olämplig användning, eller som i alla fall inte överensstämmer med de varningar som ges i användarhandboken som levereras tillsammans med produkten;
 - byte av originalkomponenter eller tillbehör mot annan typ som ej godkänts av tillverkaren, eller som utförts av obehörig personal.
-


FIGURES - IMAGES
 ABBILDUNGEN - FIGURAS
 AFBEELDINGEN - FIGURAS
 FIGURER - BILDER




1




3

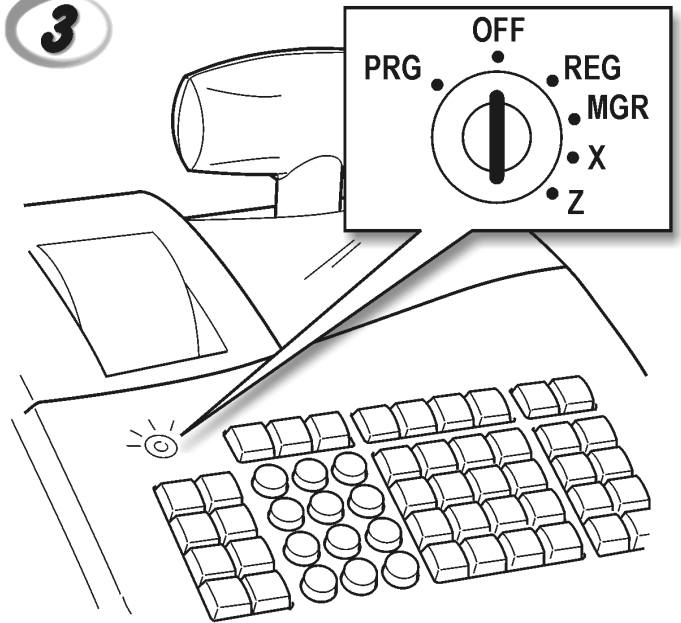


4

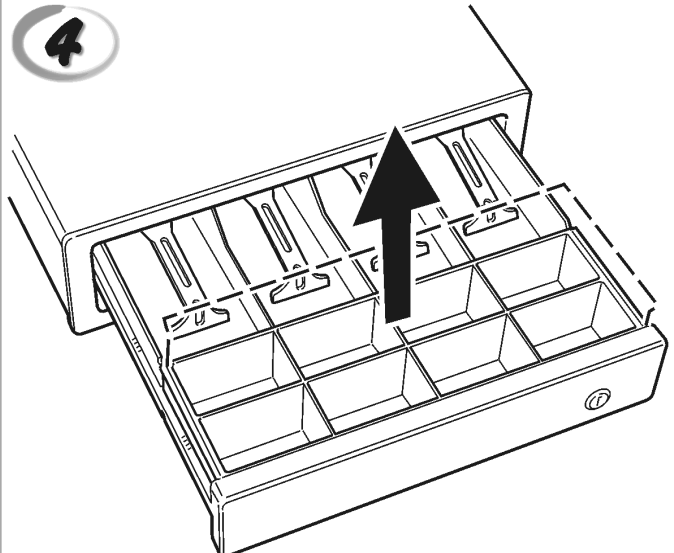

2

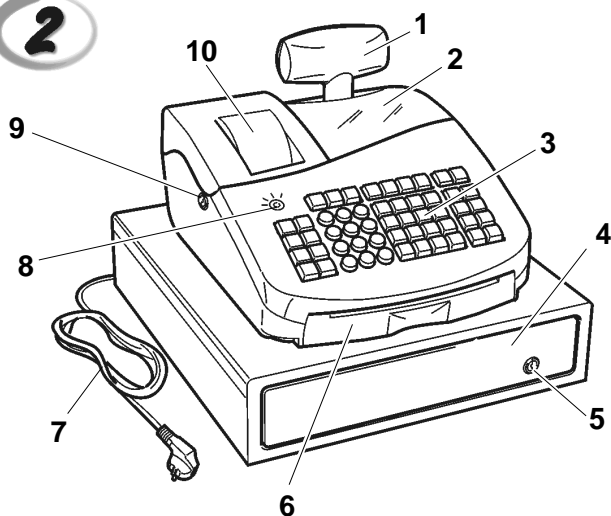

5

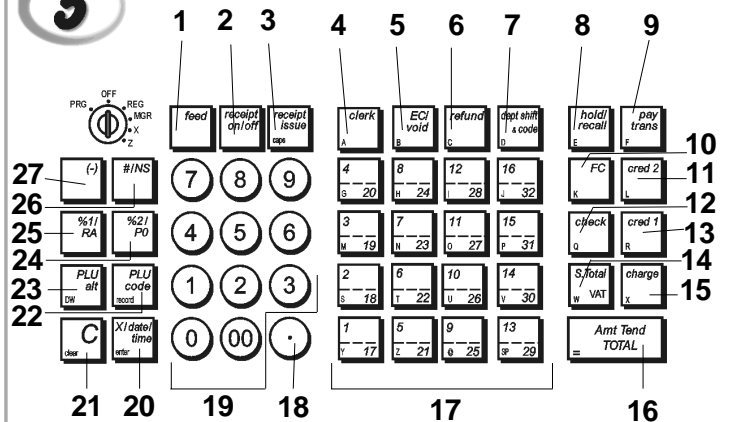

SAFETY INFORMATION
INFORMATIONS DE SECURITE
SICHERHEITSVORSCHRIFTEN
INFORMACIÓN DE SEGURIDAD
VEILIGHEIDSGEINFORMATIE
INFORMAÇÃO SOBRE SEGURANÇA
SIKKERHEDSFORANSTALTNINGER
SÄKERHETSINFORMATION



GB

1. Connect the power cord to an electrical outlet that is near the product and easily accessible.
2. Install your cash register on a flat and stable surface, at a location where no one can step on or trip over the power cord.
3. Do not use your cash register near water, or with wet hands.
4. Do not expose your cash register to rain or moisture.
5. Unplug your cash register from the electrical outlet before cleaning.

F

1. Brancher le cordon d'alimentation à la prise électrique qui se trouve près du produit et facilement accessible.
2. Initialiser la caisse enregistreuse sur une surface plane et stable, dans une place où il n'y pas le risque de presser ou de heurter le cordon.
3. Ne pas utiliser la caisse enregistreuse près de l'eau, ou avec les mains mouillées.
4. Ne pas exposer la caisse enregistreuse à la pluie ou à l'humidité.
5. Débrancher la caisse enregistreuse de la prise électrique avant de la nettoyer.

D

1. Das Netzkabel an eine Steckdose anschließen, die in der Nähe der Maschine und leicht zugänglich ist.
2. Die Registrierkasse auf einer ebenen stabilen Fläche installieren. Darauf achten, dass keiner über das Netzkabel stolpern oder auf es treten kann.
3. Die Kasse nicht in der Nähe von Wasser oder mit nassen Händen benutzen.
4. Die Kasse nicht Regen oder Feuchtigkeit aussetzen.
5. Vor Reinigungsarbeiten die Kasse vom Stromnetz trennen.

E

1. Conecte el cable de alimentación a una toma eléctrica que se encuentre cerca del producto y que tenga un fácil acceso.
2. Instale su caja registradora en una superficie plana y estable, en un emplazamiento en el que nadie pueda pisar el cable de alimentación o tropezar con él.
3. No utilice la caja registradora cerca del agua ni si tiene las manos húmedas.
4. No exponga la caja registradora a la lluvia o la humedad.
5. Desconecte la caja registradora de la toma eléctrica antes de la limpieza.

NL

1. Sluit het netsnoer aan op een stopcontact dat zich in de buurt van het kasregister bevindt en vrij toegankelijk is.
2. Installeer uw kasregister op een plat en stabiel oppervlak, op een plaats waar niemand op het netsnoer kan trappen of erover struikelen.
3. Gebruik uw kasregister niet in de buurt van water, of met natte handen.
4. Stel uw kasregister niet bloot aan regen of vocht.
5. Trek de stekker uit het stopcontact voordat u het kasregister gaat schoonmaken.

P

1. Ligue o cabo de alimentação a uma tomada elétrica que esteja perto da máquina e seja de fácil acesso.
2. Instale a caixa registradora sobre uma superfície plana e estável, num local onde ninguém possa chocar com ela ou tropeçar no cabo de alimentação.
3. Não utilize a caixa registradora perto de água, nem a manuseie se tiver as mãos molhadas.
4. Não exponha a caixa registradora a chuva ou humidade.
5. Desligue a caixa registradora da tomada de corrente antes de a limpar.

DK

1. Tilslut de elektriske kabel til elnettet, som er ved siden af produktet og nemt tilgængelig.
2. Placer Deres kasseapparat på en flad, sikker og stabil overflade, et sted hvor ingen kan gå eller trampe over det elektrisk kabel.
3. Brug ikke Deres kasseapparat i nærheden af vand, eller med våde hænder.
4. Deres kasseapparat må ikke udsættes for regn eller fugtighed.
5. Slut Deres kasseapparat fra elnettet inden de går i gang med rengøring.

S

1. Stoppa in nätsladdens stickkontakt i ett lättåtkomligt vägguttag nära apparaten.
2. Installera kassaregistret på en jämn och stabil yta där ingen kan trampa på eller snubbla över nätsladden.
3. Använd inte kassaregistret nära vatten eller med våta händer.
4. Utsätt inte kassaregistret för regn eller fukt.
5. Dra ut stickkontakten från vägguttaget före rengöringen.

?



HOW DO I PROCEED?
COMMENT JE DOIT PROCEDER?
VORGEHENSWEISE
¿QUÉ DEBO HACER A CONTINUACIÓN?
HOE GA IK TE WERK?
O QUE DEVO FAZER?
FREMGANGSMÅDE?
HUR GÅR JAG VIDARE?

GB

1. Plug the cash register into a electrical outlet and insert the batteries.
2. Load the paper.
3. Proceed with Quick Start Programming.
4. Perform basic sales transactions.
5. Get to know your cash register in depth.

F

1. Brancher la caisse enregistreuse à la prise électrique et insérer les batteries.
2. Charger le papier.
3. Procéder avec la fonction Vite Démarre de Programmation.
4. Exécuter les transactions de ventes basiques.
5. Prendre confiance avec la caisse enregistreuse.

D

1. Die Kasse an eine Netzsteckdose anschließen und die Batterien einsetzen.
2. Papier laden.
3. Die Quick Start Programmierung durchführen.
4. Einfache Verkaufsvorgänge ausführen.
5. Sich mit allen Funktionen der Kasse vertraut machen.

E

1. Enchufe la caja registradora en una toma eléctrica e inserte las baterías.
2. Cargue el papel.
3. Continúe con la programación de la puesta en servicio rápida.
4. Realice transacciones de venta básicas.
5. Conozca más en detalle la caja registradora.

NL

1. Sluit het kasregister aan op een stopcontact en plaats de batterijen.
2. Plaats het papier.
3. Voer de snelstart-programmering uit.
4. Voer basis-verkooptransacties uit.
5. Leer uw kasregister grondig kennen.

P

1. Ligue a caixa registradora a uma tomada elétrica e insira as pilhas.
2. Coloque o papel.
3. Continue com a Programação de Iniciação Rápida.
4. Realize transacções básicas de vendas.
5. Familiarize-se com a sua caixa registradora.


DK

1. Tilslut kasseapparatet til elnettet og sæt batterierne i.
2. Sæt papir i.
3. Gå frem med Hurtig Start Programmering.
4. Indret basis salgstransaktioner.
5. Lær Deres kasseapparat at kende.


S

1. Sätt in kassaregistersladden i ett vägguttag och sätt i batterierna.
2. Ladda pappret
3. Gå vidare med programmeringen för snabbstart.
4. Utför grundläggande försäljningstransaktioner.
5. Fördjupa kännedomen om kassaregistret.


INSERTING MEMORY BACKUP BATTERIES
 INSÉRER LES BATTERIES TAMPONS DE LA MÉMOIRE
 BATTERIEN ZUR SPEICHERSICHERUNG EINSETZEN
 INSERCIÓN DE LAS BATERÍAS DE RESPALDO DE LA MEMORIA
 INSTALLEREN VAN DE BATTERIJEN VOOR NOODVOEDING
 INSERIR AS PILHAS DE BACKUP DA MEMÓRIA
 INDSÆT HUKOMMELSE BACKUP BATTERIER
 SÄTTA BACK-UP BATTERIERNÄ

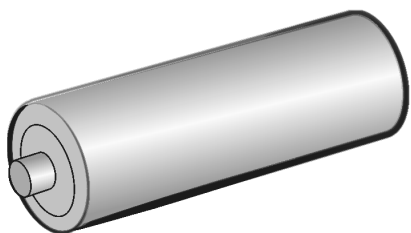


2

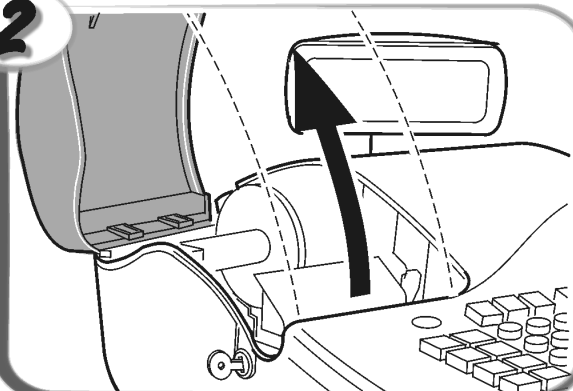


4

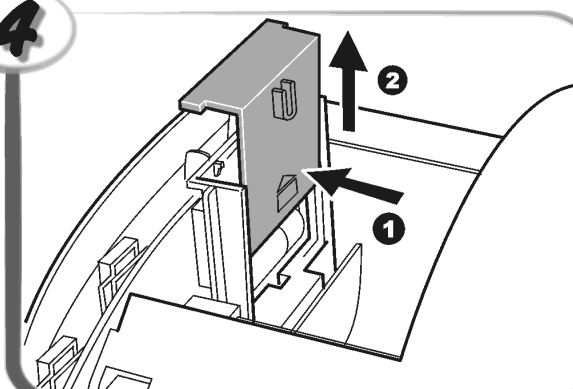


6

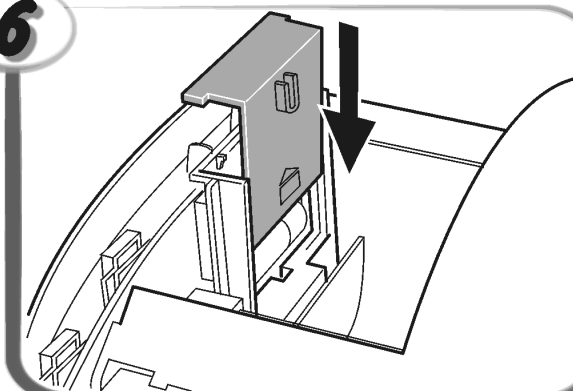


1

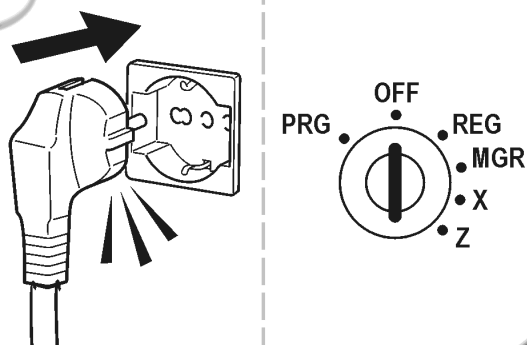


3

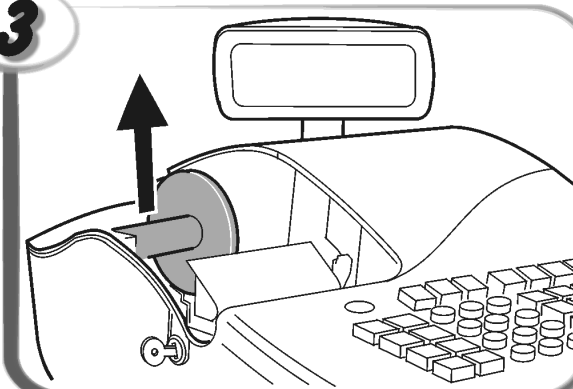


5

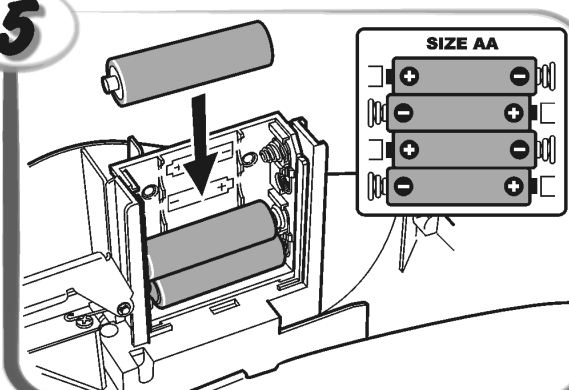


7

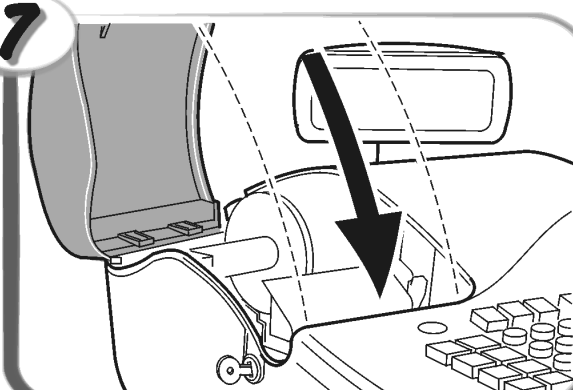


LOADING THERMAL PAPER
 INSTALLATION DU PAPIER THERMIQUE
 EINLEGEN VON THERMOPAPIER
 CARGA DEL PAPEL TÉRMICO
 THERMISCH PAPIER PLAATSEN
 COLOCAR PAPEL TÉRMICO
 ISÆTNING AF TERMOPAPIR
 LADDA VÄRMEKÄNSLIGT PAPPER

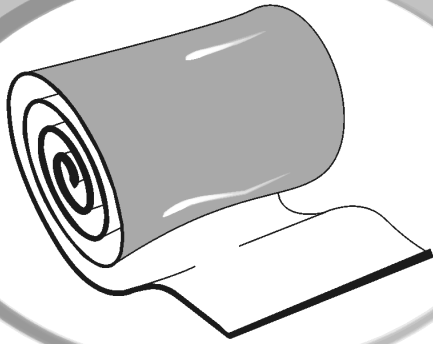


1

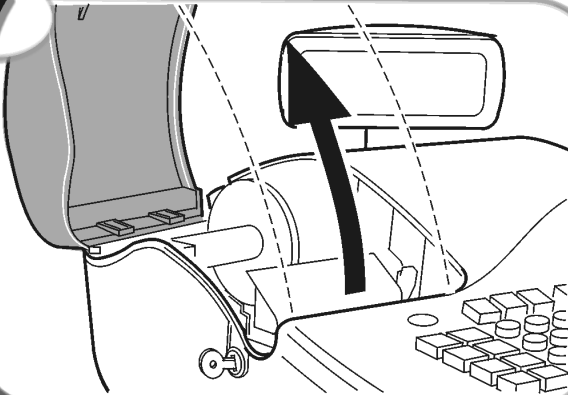


2

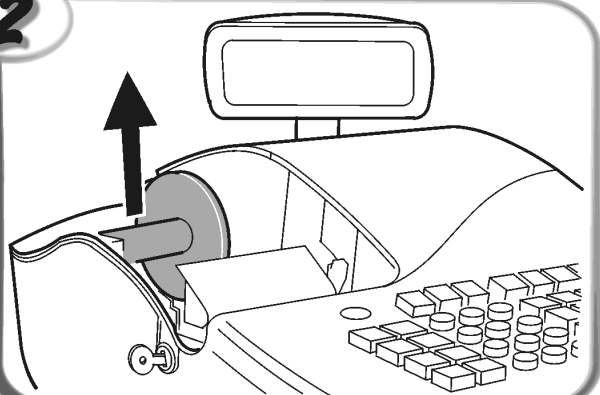


3

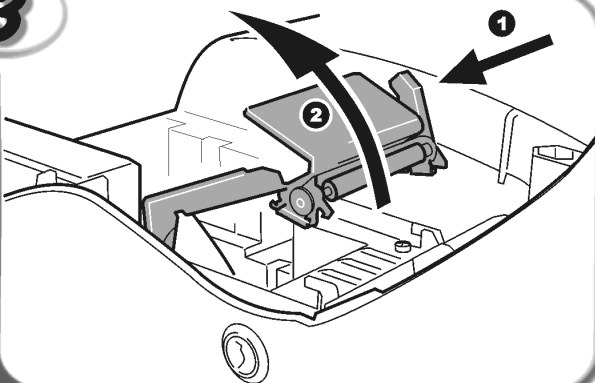



4

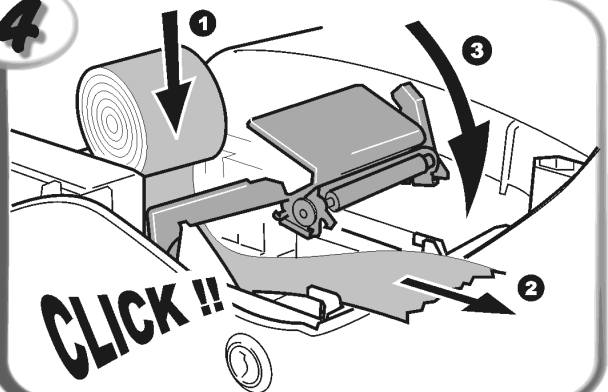

5

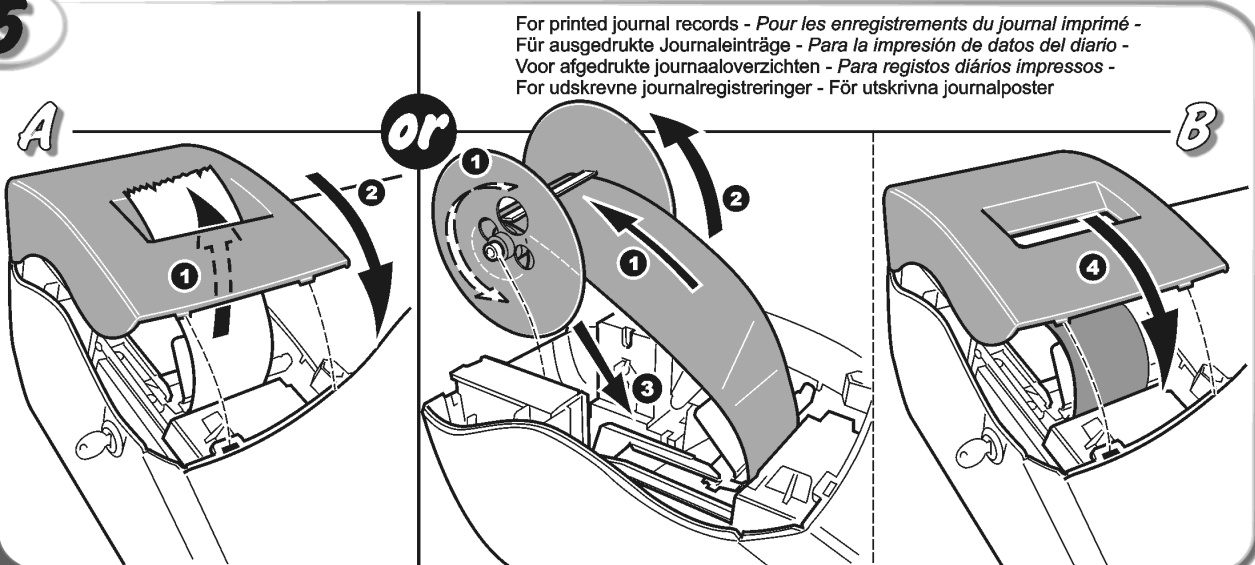




DAILY JOB OPERATIONS
OPÉRATIONS QUOTIDIENNES
TÄGLICHE ARBEITEN
OPERACIONES COTIDIANAS DURANTE EL TRABAJO
DAGELIJKSE TAKEN
OPERAÇÕES DIÁRIAS
DAGLIGE ARBEJDSOPERATIONER
DAGLIGA ARBETSMOMENT

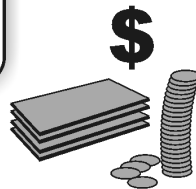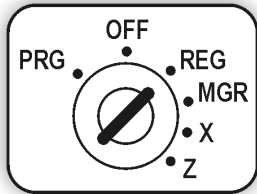

Morning startup
Démarre du matin
Einschalten zu
Geschäftsbeginn
Puesta en marcha al inicio
de la jornada
Morgens opstarten
Arranque da manhã
Morgens opstart



Sales transactions
Transactions de ventes
Verkaufsvorgänge
Transacciones de venta
Verkooptransacties
Transacções de vendas
Salgstransaktioner
Igångsättning på morgonen

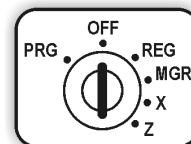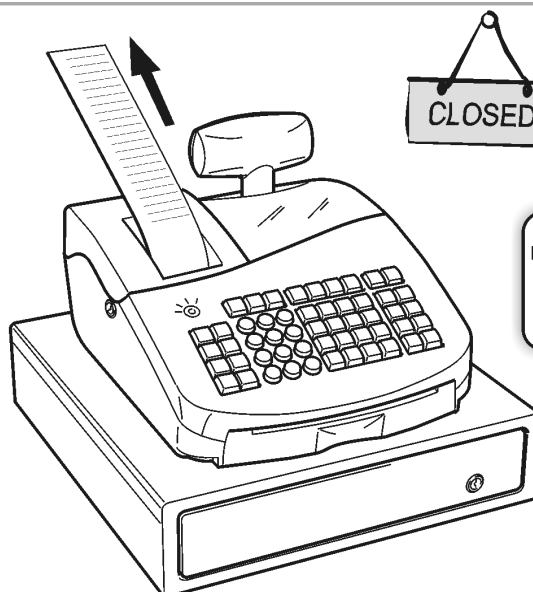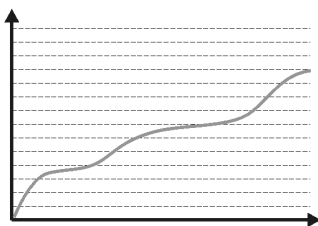

End of day reports
Compte-rendu de fin journée
Berichte bei Geschäftsende
Informes de cierre de la
jornada
Einddaags-rapportages
Relatórios de fim de dia
Slut af dagens registreringer
Försäljningstransaktioner
Slut på dagen rapporter

Contents

Major Features	1
Cash Register Components	1
Removable Cash Drawer with Lock	1
Keypad Functions	2
The Control Lock	3
The Control Keys	3
Operator and Customer Displays	3
Error Conditions	3
Error Codes	3
Clearing an Error	3
Cash Register Reset Operations	4
Electronic Journal	4
Quick Start	5
Quick Start Programming	5
Cash Register Programming and Features	7
Making Changes to Cash Register Programming	7
Caption Programming using the Keypad and Character Table	7
Receipt Header and Footer	8
Percent Discount (-%) or Add On (+%)	8
(-) Key	8
Department Names	9
Department Group Names	9
PLU Item Names	9
Foreign Currency Descriptors	11
Rounding Option for Swiss, Danish, Swedish and EURO Currencies	11
Decimal Point Position	11
Fraction Rounding for VAT Calculation	11
Printing VAT Information on Customer Receipts	12
Clerk System	12
Clerk Names	13
Manager Passwords	14
Using the Cash Register in a Password Protected Mode	14
Training Mode	14
Cash Register Identification Number	15
System Options	15
Cash Register Programming Reports	17
Management Reports	18
X and Z Reports	18
Cash in Drawer Report	19
Clerk Report	19
PLU Sales Report	20
PLU Range Sales Report	20
Department Range Sales Report	20
Department Group Sales Report	20
Time Report	20
Training Report	20
Electronic Journal Reports	20
Sales Transactions	21

Major Features

- 99 departments that can be grouped into up to 10 merchandise categories;
- Up to 1500 Price Look-Up (PLU) settings with the possibility of linking PLUs to departments;
- 15 clerk numbers to monitor the sales of individual employees, and possibility of activating a Clerk Security System consisting of a three-digit security code;
- Electronic journal with a capacity of up to 7200 transaction lines for storing all transaction data; signaling of EJ memory full and nearly full conditions;
- Single-line client and dual-line operator alphanumeric displays;
- Thermal printer with journal record or receipt printing capabilities;
- Quantity entries using the decimal point;
- Training mode facility with related password;
- Replaceable keycaps;
- Receipt on/off capabilities;
- Possibility of naming departments, department groups, clerks, PLUs, foreign currencies and credit card captions;
- Possibility of defining manager passwords for the PRG and Z modes, X mode, and Training mode;
- Customer sales receipt header personalization and receipt footer definition;
- Special rounding capabilities for Swiss, Danish and Swedish and Euro currencies;
- Customer receipt and management report printing in English, French, German, Spanish, Dutch, or in a new user-defined language entry;
- Detailed department programming;
- 4 foreign currency exchange rates with related currency descriptors;
- Cash, check, charge and card tender media keys, with change tendered on all payments;
- 4 different VAT rates;
- Possibility of programming the cash register to print a range of VAT totals on the sales receipt;
- Sales transaction hold and recall function;
- Battery back-up protection for the records and programming data.


Cash Register Components

With reference to figure 2:

1. Customer display
2. Operator display
3. Keypad
4. Cash drawer
5. Cash drawer lock
6. Item deposit drawer
7. Power cord
8. Control lock
9. Printer compartment lock
10. Printer compartment cover with receipt output window

Removable Cash Drawer with Lock




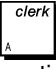
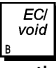
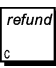
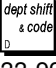
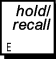

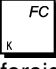

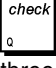














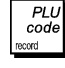


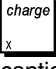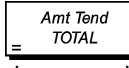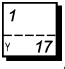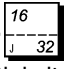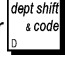


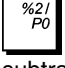

With reference to figure 4, the cash drawer has slots for


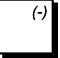
banknotes and for coins. Open the drawer by pressing 

or by sliding the hidden emergency button underneath the register.

Keypad Functions

With reference to figure 5:

1.  - Advances the receipt or journal paper one line feed; advances the paper continuously when held down.
2.  - Toggles the cash register between printing and not printing the sales receipt in the REG or MGR mode.
3.  - If the cash register is set accordingly, prints one or more copies of the last sales receipt. When pressed during caption programming, toggles between caps on/off.
4.  - Confirms an entered clerk number. Used during caption programming.
5.  - Deletes the last item entered, and corrects a particular entry after it is processed and printed, or full entries after a subtotal. Used during caption programming.
6.  - Subtracts an item that is returned for refund. Used during caption programming.
7.  - Allows price entries for departments 17-32 and 33-99. For departments 17-32, press this key before entering the applicable department keys. For departments 33-99, press this key, manually enter the department number using the numeric keypad, then press this key again. Used during caption programming.
8.  - Holds and then recalls a sales transaction so that a second transaction can be performed in the meantime. Used during caption programming.
9.  - Transfers payment from one form of payment to another after the finalization of a sales transaction. Used during caption programming.
10.  - Automatically calculates and displays the value in foreign currency of the subtotal of a sale or of a particular amount registered. Used during caption programming.
11.  - Registers sales that are put on a credit card that is alternative to Credit Card 1 or the one used for Charge tenders. Used during caption programming.
12.  - Registers sales paid by check. Confirms the clerk three-digit code entered and is used during caption programming to also confirm the entries made.
13.  - Registers sales that are put on a credit card that is alternative to Credit Card 2 or the one used for Charge tenders. Used during caption programming.
14.  - Subtotals a sale, and used for the programming of VAT rates. Used during caption programming.
15.  - Registers sales that are charged. Used during caption programming.
16.  - Totals exact cash transactions, computes change and totals transactions that are split tendered with check or credit card and cash together. Used to exit a programming session.
17.   - Departments 1 through 16, to enter single or multiple item sales to a particular department. When pressed after , registers to Departments 17 through 32. Used during caption programming; the  key confirms the entry of the selected character when the same key is repeated to enter same character again, and adds a space between characters.
18.  - Enters a decimal point for defining product quantities with decimals during sales transactions. During caption programming,  is used as the typical backspace function for cancelling the last character entered.
19.    - Input amounts, indicate how many times a particular item repeats, add and subtract percentage rates and input department code numbers. Used to input the characters indicated on the related key and indicated in the Character Table when defining clerk names, receipt header/footer, department names, department group names, PLU product names, currency identifiers and credit card captions.
20.  - Multiplies [DEPARTMENT],  or  entries, toggles between displaying the current date and the current time.
21.  - Clears an entry made from the numeric keypad or with  before finalizing a transaction with a Department or function key. Also used to clear error conditions.
22.  - Registers a preset price of an individual item to the appropriate department.
23.  - Temporarily overwrites a price that was assigned to a PLU number. During caption programming, pressed before a character sets the character as double width.
24.  - As the %2 key, when programmed accordingly subtracts a percentage from an item or sales total. As the PO key, registers any money taken out of the cash drawer that is not part of a sale.
25.  - As the %1 key, when programmed accordingly subtracts a percentage from an item or sales total. As the RA key, registers any money received on account that is not part of a sale; for example, the start-up money put in the drawer at the start of each business day can be registered as an RA.

26.  - Opens the cash drawer without registering any amount or when changing cash for a non-sales transaction. With the cash register in the programming mode, used to select the different captions that can be programmed.
27.  - Subtracts an amount from an item or sales total.

The Control Lock

Insert the PRG, REG or Z key into the Control Lock to use the cash register accordingly. With reference to figure 3, turn the control key to one of the following positions:


- OFF** The cash register is turned off and cannot be used.
- PRG** Used to program the cash register according to your specific needs.
- REG** The cash register is set for standard sales transactions. A customer receipt is printed for each transaction.
- MGR** Overrides clerk status programming thus allowing the clerk to perform unauthorized operations (for example, Voids, Refunds, Negative percent, Paying money out, etc.).
- X** Prints the X management (mid-day) report.
- Z** Prints the Z management (end-of-day) report and resets totals (except the grand total) to zero.

The Control Keys

- REG** The REGISTER key can be used in the OFF, REG, MGR and X modes, granting both Clerk and Supervisor access to cash register functions.
- PRG** The PROGRAM key works in all modes (PRG, OFF, REG, MGR, X and Z). It is usually used by the Supervisor to program the cash register and print X and Z management reports.
- Z** The Z key can be used in the OFF, REG, MGR, X and Z modes granting a higher-level access with respect to the REG key.



Operator and Customer Displays

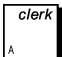
Your cash register is equipped with a single-line customer display and a dual-line operator display. With reference to figure 6, the display is read from left to right as follows:

- Department** (1) - A set of digits indicating the department key pressed for each entry. At the end of a sales transaction, indicates the means of payment registered.
- Repeat/Multiply** (2) - A number displayed when repeating or multiplying items to indicate the number of items entered at one price.
- Amount** (3) - Indicates entry amounts and sales totals.
- 1...15** (4) - With the Clerk System active, indicates the clerk number entered before working in the REG mode, or whenever  is pressed.
- Op. messages** (5) - Upper line of the operator display showing programming and transaction messages, and clerk identifiers.

Special Symbol Indicators

Special symbols appear at the far left-hand side of the displays during cash register operation:

- C (Change)** Indicates that the displayed amount is the change due to the customer.
- E (Error)** Indicates when an error is made during operation or when programming the cash register. An error tone sounds to alert the operator.
- S (Sub-total)** Indicates that the amount shown is the subtotal of a transaction, including sales tax if applicable.
- (Minus)** Displays a negative entry. Also displays if subtotal or cash tendered total is a negative number due to a return or refund.
- _ (Line)** Indicates, from left-to-right on the bottom of the display, the caps lock mode (during character entries in the PRG mode), receipt off mode, training mode, a transaction hold condition and an electronic journal nearly full condition (less than 700 transaction lines available).
-  Displayed when  is pressed to indicate that the amount is displayed in foreign currency.
- CA (Cash)** Indicates a sales transaction paid by cash.
- Ch (Check)** Indicates a sales transaction paid by check.
- Cr (Charge)** Indicates a sales transaction paid by credit card.

These symbols clear automatically when you start the next entry or press .


Error Conditions


Error Codes

The following error codes can be displayed:

- E1** Operation error
- E2** Sales amount exceeded
- E3** Zero-price entry error
- E4** Incorrect full-void entry
- E5** Clerk number and password requested
- E6** Manager password requested.


Clearing an Error

Press  to clear an error. The tone ends, the displays clear and the keypad unlocks, allowing you to continue with the transaction or restart the program.

If an error condition cannot be cleared by pressing , reset the cash register by performing one of the cash register reset operations.

Cash Register Reset Operations


If the cash register does not function, for example while programming and the error signal cannot be stopped by

pressing , reset the cash register.

There are four reset operations; **be very careful when choosing the one to perform since you could unnecessarily cancel report data and cash register programming data.**

Partial Reset


A Partial Reset operation just clears the cash register's working memory.

1. Unplug the cash register from the electrical outlet.
2. Press and hold down  and **7** simultaneously while plugging the cash register back into its electrical outlet.

If the cash register still remains in an error condition, proceed with the Full Reset - Reports operation.

Full Reset Reports


A Full Reset - Reports operation erases the cash register's working memory, and all totals and counters (all report data).

1. Unplug the cash register from the electrical outlet.
2. Press and hold down  and **3** simultaneously while plugging the cash register back into its electrical outlet.

If the cash register still remains in an error condition, proceed with the Full Reset - New Language Entry Excluded operation.

Full Reset - New Language Entry Excluded


A Full Reset - New Language Entry Excluded, erases the cash register's working memory, all totals and counters (all report data) and cancels all cash register programming data with the exclusion of the language-specific captions programmed. Be extremely careful when using this reset operation.

1. Unplug the cash register from the electrical outlet.
2. Press and hold down  and **1** simultaneously while plugging the cash register back into its electrical outlet.
3. Reprogram the cash register.

If the cash register still remains in an error condition, proceed with the Full Reset - All Data operation.

Full Reset - All Data

A Full Reset - All Data operation erases the cash register's working memory, all totals and counters (all report data) and cancels all cash register programming data. Be extremely careful when using this reset operation. Use this method as last resort only.

1. Unplug the cash register from the electrical outlet.
2. Press and hold down  and **9** simultaneously while plugging the cash register back into its electrical outlet.
3. Reprogram the cash register.

Electronic Journal




The cash register is equipped with an electronic journal memory that by default can contain up to 6,400 lines of transaction data. **The electronic journal is not active when you receive the cash register**, but you can activate it at any time as follows:

1. Control lock key position: **PRG**.


2. Press **5** **0** .

Once the electronic journal is activated, you can personalize some of its features, such as increasing its line capacity to 7200 lines, by programming System Options 27, 30, 31, 32 and 43. See "System Options" for details.


The Electronic Journal (EJ) stores all the sales receipts recorded in the REG and MGR modes, thus allowing you to print this record at any time or when memory reaches the nearly full or full condition.

To know how many lines are remaining in the electronic journal, press    in the REG mode and outside of a sales transaction.


When the electronic journal reaches a **nearly full condition**, there are less than 700 lines remaining in journal memory. A message is displayed indicating the number of lines remaining and a warning beep will sound at the beginning and end

of each transaction performed; press  and continue your transaction. Then either print the contents of the electronic journal, as explained below, or continue with further transactions.

When the journal reaches a **full condition**, less than 300 lines are remaining in memory. A message is displayed indicating that the journal memory is full along with a warning

beep at the beginning of a transaction; press  and continue your transaction.

Then either print the contents of the electronic journal, as explained below, or continue with further transactions; remember, however, that the transaction data will NOT be stored in memory and the consecutive receipt counter will not increase. If you want to terminate the sales transaction,

press .

Printing and Clearing the Contents of the Electronic Journal

Make sure that plenty of paper is loaded in the printer.

1. Control lock key position: **Z**.


2. Press .

When the contents of the electronic journal are printed, a message is displayed along with a beep to indicate that the EJ memory capacity has been restored to its maximum programmed line capacity.

NOTE: You can also print the contents of the electronic journal with the control switch in the X position; doing so, however, will not clear the electronic memory.

Clearing Electronic Journal Memory Without Printing the Contents

The electronic journal memory contents are cleared and **not printed**:

1. Control lock key position: **Z**.
2. Press    .

Quick Start








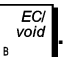
This section allows you to program basic cash register features so that you can start to work right away with your new product.

Programs and transaction information for management reports are stored in the memory of the cash register which is protected by back-up batteries.

Before beginning to program the cash register or to perform sales transactions, insert the batteries to save this information if a power failure occurs or if the cash register is unplugged from the electrical outlet.

Quick Start Programming


1. Set your Language

1. Control lock key position: **PRG**.
2. Press .
3. Press your language identifier:  for Spanish,  for French,  for German,  for Dutch,  for the new language entry, or  for English.
4. Press .





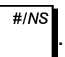


Example: Program the cash register to print in French.

Type/Press:   
Language identifier


2. Set the Date

1. Control lock key position: **PRG**.
2. Type the current date in the DDMMYY format.
3. Press .

Example: Set a date of May 25, 2005.

Type/Press:       
Day Month Year



3. Set the Time

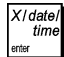1. Control lock key position: **PRG**.
2. Type the current time in the HH:MM, 24-hour format.
3. Press .

Example: Set the time at 3:30 PM.


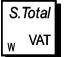




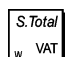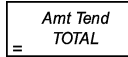

Type/Press:     
Hour Minutes

4. Set a Fixed VAT Rate

1. Control lock key position: **PRG**.
2. Type the [number] that represents the VAT (1 for VAT1, 2 for VAT2, 3 for VAT3 and 4 for VAT4).
3. Press .
4. Type the VAT rate. Five digits can be used and you **MUST** enter three digits after the desired decimal place.
5. Press .

Example: Set a VAT1 rate of 5.50%.

Type/Press:

       
VAT number 5 50

NOTE: Before changing a VAT rate, print a Z Financial report. See "X1 and Z1 Financial Reports".

See sections "Fraction Rounding for VAT Calculation" and "Printing VAT Information on Receipt" for other VAT-related features.

5. Program the Departments

A total of 99 departments are available. Programming a department means defining a department status and an associated price.

The department status consists of a 7-digit code that characterizes the department as follows:

- positive or negative sales
- single or multiple item sales
- High Digit Lock Out (HDLO) status, whereby you prohibit item entries for a certain number of digits and above.
- previously programmed tax status
- link to one of up to 10 merchandise categories.







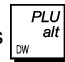
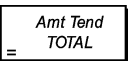
You can then assign a preset price to the department.

The 7-digit department status can be programmed using the following options:

Positive/Negative Sales **Multiple/Single Item Sales**
 0 = Positive department 0 = Multiple item sales
 1 = Negative department 1 = Single item sales

HDLO **Tax Status**
 0 = No HDLO 00 = Non taxable
 1 = 0.01 - 0.09 01 = Taxable with VAT 1
 2 = 0.01 - 0.99 02 = Taxable with VAT 2
 3 = 0.01 - 9.99 03 = Taxable with VAT 3
 4 = 0.01 - 99.99 04 = Taxable with VAT 4
 5 = 0.01 - 999.99
 6 = 0.01 - 9999.99



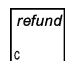

Merchandise category
 00 - 10 (category number)








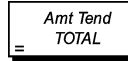
- Control lock key position: **PRG**.
- Press  to enter the department status programming mode.
- Define the department to program by typing the department number **[1 to 99]** and then press .
- Type the **[Positive/Negative sales code]**, **[Single/multiple item sales code]**, **[HDLO code]**, **[Tax Status code]** and **[Category link number]** by referring to the previous table. A 7-digit status code must be entered.
- Press  followed by  to exit.
- Press  to enter the department price definition mode.
- Define the department to associate the price to by typing the department number **[1 to 99]** and then press .
- Type a **[unit price]** to assign, press  followed by  to exit.

Example: Program Department 2 as follows: multiple positive item sales, no HDLO, VAT 2, link to category 3 and an associated price of £2.50.

Type/Press:

       
 Department Positive item sales Multiple item sales No HDLO Tax status






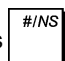

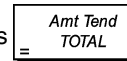
   
 Merchandise category

       
 Department Unit price

After you have programmed your departments, you can print a report that indicates the programming values. See section "Department Programming Report" for details.





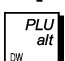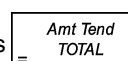



6. Program Fixed Price Look-Ups (PLUs)







Up to 1500 PLUs can be programmed. Programming a PLU item means associating a fixed price to it and then linking it to a department. You can change the number of PLUs available to 500 by setting system option 27 to 1. Refer to section "System Options" for details.

- Control lock key position: **PRG**
- Press  to enter the PLU price definition mode, type the PLU number **[1 to 1500]** then press .
- Type the **[unit price]** that you wish to assign to the PLU, press  and then press  to exit.
- Press  to enter the PLU-Department link definition mode.
- Type the PLU number **[1 to 1500]** that you are currently programming and press .
- Type the department number **[1 to 99]** that you want to link the PLU to. If tax is required for a particular PLU item, be sure to link the PLU number related to the item to a department that is programmed for tax. To program a department for tax, refer to the section Program the Departments.
- Press  and then press  to exit.

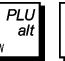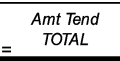Example: Create PLU 1 with a unit price of £2.69 assigned to Department 3.

Type/Press:

       
 PLU number PLU price

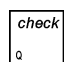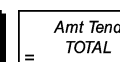     
 PLU number Department

After you have programmed your PLU items, you can print a report that indicates the programming values. See section "PLU Programming Report" for details.

Cash Register Programming and Features

Programs and transaction information for management reports are stored in the memory of the cash register which is protected by back-up batteries.

Before beginning to program the cash register or to perform sales transactions, insert the batteries to save this information if a power failure occurs or if you unplug the cash register from the power outlet.

Making Changes to Cash Register Programming

If you wish to make a change to your initial programming (such as an update to VAT rates, PLUs or exchange rates):

- Turn the control lock key to the PRG position.
- Re-do the program in question and confirm as explained in the next sections
- Turn the control lock key to another operating mode.

A new program entry will automatically overwrite a previous entry for the same program.

Caption Programming using the Keypad and Character Table


The following captions can be programmed:



- Up to 1500 PLU item names of a maximum 12 characters each
- Up to 99 department names of a maximum 12 characters each
- Up to 10 department group names of a maximum 12 characters each
- Up to 15 clerk names of a maximum 24 characters each
- Receipt headers of up to 5 lines of a maximum 24 characters each
- Receipt footers of up to 5 lines of a maximum 24 characters each
- Up to 4 foreign currency identifiers of a maximum 10 characters each
- Up to 2 credit card names of a maximum 12 characters each
- up to 92 new language entry captions of a maximum 10 characters each
- up to 26 new language entry captions of a maximum 24 characters each.



Use the keypad to enter non-accented capital letters and the Character Table to enter small letters, accented capital and small letters, special characters or symbols.

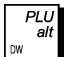


Using the Keypad

To use the keypad to enter capital non-accented caption letters, locate the letter wanted on the cash register's keypad and press its associated key (the letter will be displayed on the far right-hand side of the display).



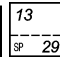
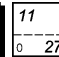

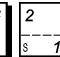
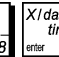
- To give a determined character a double width attribute, press  before pressing the related character key.

- To enter a space between characters, press  .

- If the same key has to be used for successive letters of a caption, press  between the two letters.
- Any incorrect character can be canceled by pressing  which provides the typical backspace function of the PC environment.


- To toggle between capital letter ON/OFF, press .
- To skip directly to a determined record number (for example, to skip to Department number 4) type the record number using the numeric keypad and then press .
- Confirm your final caption by pressing .

Example: Enter the word BOOKS.

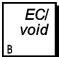Type/Press:       .


Using the Character Table

The Character Table provides all the letters and symbols that your cash register is capable of printing. With reference to figure 7, the Character Table is divided into two parts: one identified with "CAPS" on the top left-hand corner and to be used with the CAPS mode activated, the other identified with "Non CAPS" and to be used with the CAPS mode deactivated.

- To toggle the cash register between the **CAPS** and **Non CAPS** mode, press . When the cash register is in the CAPS mode, a line is displayed on the far left-hand side of the display.


To use the character table:

- First look for the letter or symbol wanted and then identify its corresponding letter listed in the first column on the left.
- Switch the cash register to the CAPS or Non CAPS mode depending in which part of the table the letter or symbol wanted is located.
- Press the letter key on the keypad the number of times needed to select the character by reading the number on the row on the top of the table.

- Confirm your final caption by pressing .

NOTE: Special accented national letters are not displayed.

Example: Select the letters à and Ü.

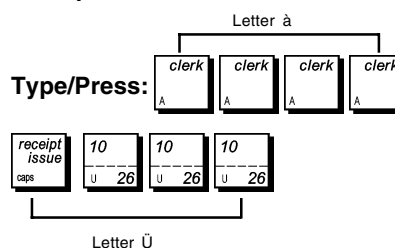

Receipt Header and Footer


By default your cash register prints a header on all customer receipts. It can also print a personalized footer, if you program system option 23 accordingly. See section "System Options" for details.

The default receipt header consists of up to 5 lines of 24 characters each or 10 lines if you consider the footer as part of the header. If System Option 23 is set to 1 so that a footer is printed on the sales receipt, the header and footer will each consist of 5 lines of 24 characters each with default captions. You can change the cash register's default header, or the programmed default footer, by using the keypad and/or Character Table to enter the characters wanted.

1. Control lock key position: **PRG**.
2. Press repeatedly until displaying the message indicating the first line of the receipt header, or the first line of the receipt footer.
3. To jump to a specific header or footer line to personalize, type the **[line number]** on the numeric keypad and then press .
4. Enter the letters or characters of the string you wish to define and then press . You are now prompted to personalize the following line.
5. Repeat steps 3 and 4 if you wish to program the remaining programmable header or footer lines.
6. Press to exit.

Example: Change the third line of the default header to SALES ON NOW using the CAPS Character Table.

Type/Press:

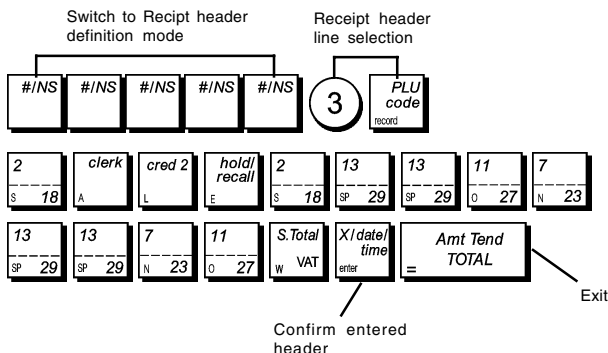

Percent Discount (-%) or Add On (+%)

Setting this option automatically calculates the preset discount or add on rate each time is pressed, or the preset discount each time is pressed. The percentage rate can be discounted from, or added on to, an individual item or sales transaction total.

1. Control lock key position: **PRG**.
2. Type the **[numbers]** representing the desired percentage rate. Up to four digits ranging from 0 to 99.99 can be used. Two digits must be placed before the decimal point and two must be placed after.

3. Define whether the percentage rate is a discount or an add on by pressing the related code indicated below:

0 = Percent add on

1 = Percent discount


Remember that can only be used for percent discounts.

4. Press or to assign the rate and function to the respective key.

Example: Program the key with a standard 5.50%

add on rate and the key with a standard 10% discount rate.

Type/Press:

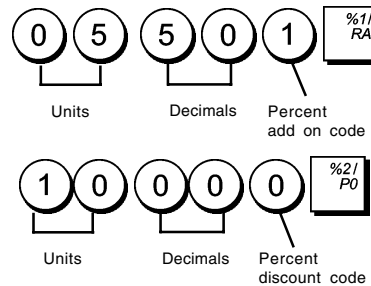

(-) Key

A High Digit Lock Out (HDLO) and tax status can be assigned to the . You can limit the number of digits, i.e. the maximum value of a minus key operation, from 1 to 6 digits. This makes sure that minus key amounts do not exceed a maximum amount. You can also assign a VAT rate or a non-tax status to the minus key. Make your selections for this feature from the following options:

High Digit Lock Out

- 0 = No HDLO
- 1 = 0.01 - 0.09
- 2 = 0.01 - 0.99
- 3 = 0.01 - 9.99
- 4 = 0.01 - 99.99
- 5 = 0.01 - 999.99
- 6 = 0.01 - 9999.99


Taxation

- 00 = Non-taxable
- 01 = Taxable with VAT 1
- 02 = Taxable with VAT 2
- 03 = Taxable with VAT 3
- 04 = Taxable with VAT 4

1. Control lock key position: **PRG**.
2. Type the required HDLO code **[0 to 6]** with reference to the table above.
3. Type the required tax status code **[00 to 04]**.

4. Press .

Example: Allocate a maximum of 5 digits and VAT 2 to the minus key.

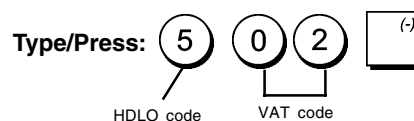


Department Names

You can assign a name of up to 12 characters long to each of the 99 departments available. The department names that you define will be printed on the customer receipts, journal reports and on all management reports.

1. Control lock key position: **PRG**.
2. Press **#/NS** repeatedly until displaying the message indicating the first customizable department.
3. To jump to a specific department to personalize, type the department number **[1 to 99]** on the numeric keypad and then press **PLU code**.
4. Enter the letters or characters of the string you wish to define and then press **X/date/time**. You are now prompted to personalize the following department.
5. Repeat steps 3 and 4 for all desired department names.
6. Press **Amt Tend TOTAL** to exit

Example: Name department 3 "BOOKS" by using the CAPS Character Table.

Type/Press:

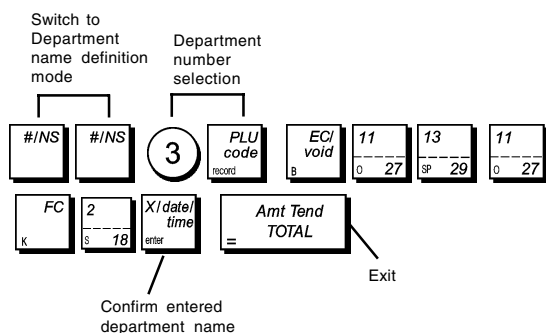


Department Group Names

You can assign a name of up to 12 characters long to each of the 10 merchandise categories (department groups) available. The merchandise category names that you define will be printed on the customer receipts, journal reports and on all management reports.

1. Control lock key position: **PRG**.
2. Press **#/NS** repeatedly until displaying the message indicating the first customizable department group.
3. To jump to a specific department to personalize, type the department group number **[1 to 10]** on the numeric keypad and then press **PLU code**.
4. Enter the letters or characters of the string you wish to define and then press **X/date/time**. You are now prompted to personalize the following department group.
5. Repeat steps 3 and 4 for all desired department group names.
6. Press **Amt Tend TOTAL** to exit.

Example: Name department group 1 "GROCERIES" by using the CAPS character table.

Type/Press:

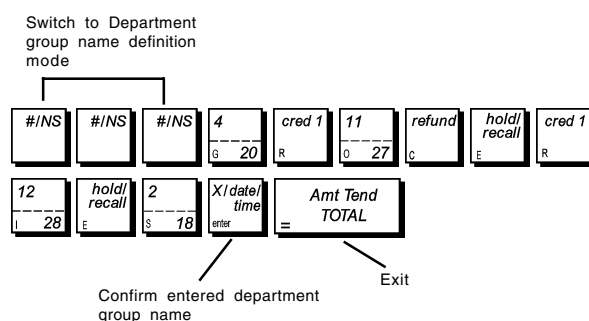


PLU Item Names

After associating a price to a PLU code, you can name the PLU to identify the product that it represents. The name that you can associate to the PLU code must be up to 12 characters long. The PLU names that you define will be printed on the customer receipts, journal reports and on the PLU management reports.

1. Control lock key position: **PRG**.
2. Press **#/NS** to display the message indicating the first PLU.
3. To jump to a specific PLU to personalize, type the PLU number **[1 to 1500]** on the numeric keypad and then press **PLU code**.
4. Enter the letters or characters of the string you wish to define and then press **X/date/time**. You are now prompted to personalize the following PLU.
5. Repeat steps 3 and 4 for all desired PLU names.
6. Press **Amt Tend TOTAL** to exit.



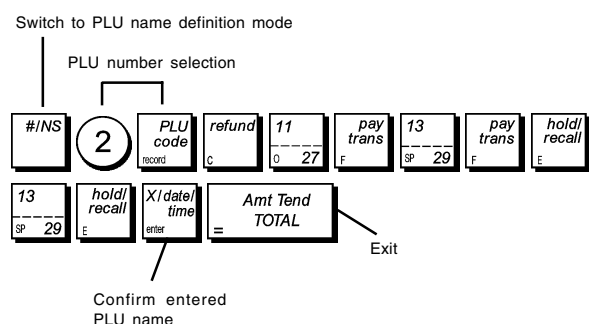


Example: Name PLU 2 "COFFEE" by using the CAPS character table.

Type/Press:




Credit Card Identifiers

You can assign a name of up to 12 characters long to each of the 2 credit cards that can be used for payment. The credit card names that you define will be printed on the customer receipts, journal reports and on all management reports.

1. Control lock key position: **PRG**.
2. Press  repeatedly until displaying the message indicating the first customizable credit card. If you want to personalize the caption of the second credit card, type  on the numeric keypad and then press .
3. Enter the letters or characters of the string you wish to define and then press . You are now prompted to name the next credit card.
4. Press  to exit.

Example: Identify credit card 1 as "VISA" by using the CAPS character table.

Type/Press:

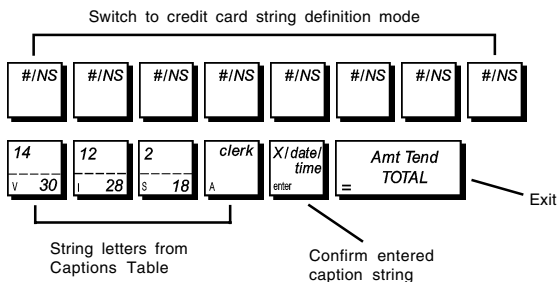




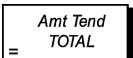
Machine Captions Personalization (New Language Entry)

Your cash register has a total of 92 operational caption strings that you can personalize in your own language. There are already 5 languages programmed in the cash register that you can select from, but you also have the option of defining specific language strings for each of the cash register's printed and displayed captions to best suit your needs.

With a specific selection command, you can also personalize an additional 26 printed caption strings.

After programming, to be able to use your personalized captions change you cash register's language selection to "New Language Entry" by setting System Option 3 to 5 as explained in section "Set Your Language".


1. Control lock key position: **PRG**.
2. Press  repeatedly until displaying the message "TXT - S01" indicating the first customizable caption string out of the 92 strings available or the message "TXT - L01" indicating the first string out of the 26 printed captions available.
3. With reference to the New Language Entry Captions Table provided at the end of this manual, select the message string that you want to personalize. To jump to a specific string, type the string number [1 to 92], corresponding to the one that you wish to personalize and then press .

4. Enter the letters or characters of the string you wish to define and then press . You are now prompted to personalize the next string.
5. Repeat steps 3 and 4 for all desired caption strings.
6. Press  to exit.

NOTE: Remember to change you cash register's language selection to "New Language Entry" by setting System Option 3 to 5 as explained in section "Set Your Language".

Example: Personalize the message string "TOTAL" to "TOTALE" by using the CAPS character table.


Type/Press:

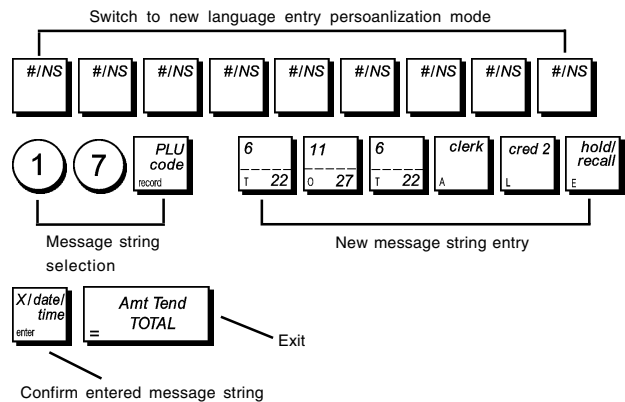


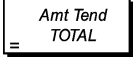


To see how you programmed you new language captions, print a New Language Entry Programming Report. Press

  or   followed by .


Foreign Currency Exchange Rates

You can program up to four different foreign currency exchange rates. The foreign currency value is displayed whenever  is pressed during a sales transaction.

1. Control lock key position: **PRG**.
2. Type the identification number  to  corresponding to the foreign currency exchange rate that you wish to define.
3. Press .
4. Type the [decimal point position] of the exchange rate (0-8 digits after the decimal point).
5. Type the [decimal point position] of the converted amount (0-3 digits after the decimal point).
6. Type the [exchange rate] using up to six digits without specifying any decimal point.
7. Press .

Example: Program the first exchange rate as:
1 GBP = 1.471 EURO.

Type/Press:

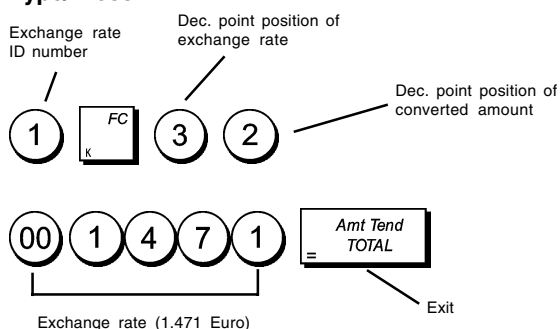


Foreign Currency Descriptors

You can define a currency descriptor of up to 10 characters long for each of the four exchange rates programmed. The descriptor of the foreign currency used will be printed on the customer receipt during sales transactions that are finalized with payment in foreign currency, and on the management reports.

1. Control lock key position: **PRG**.
2. Press until displaying the message indicating the first of the four possible foreign currency exchange rates.
3. To jump to a specific foreign currency to identify, type the currency number [1 to 4] on the numeric keypad and then press .
4. Enter the letters or characters of the string you wish to define and then press . You are now prompted to identify the following foreign currency.
5. Repeat steps 3 and 4 if you wish to assign a descriptor to the remaining foreign currencies, if defined.
6. Press to exit.

Example: Name foreign currency 1 "EURO" by using the CAPS character table.

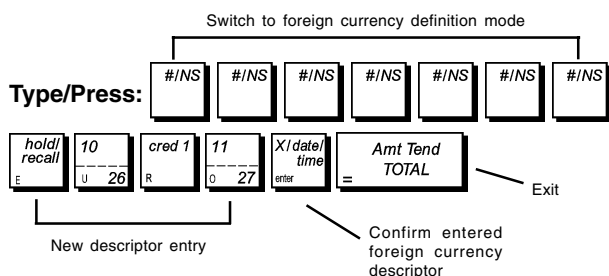

Rounding Option for Swiss, Danish, Swedish and EURO Currencies

For the Swiss franc, Danish krone, Swedish krona and Euro currencies, you can program the machine to so that the amount of a transaction is automatically rounded accordingly

whenever the or a [tender] key is pressed. The rounded result will be displayed on the operator and client displays, printed on the customer receipt and journal report. The total adjustments are indicated on the financial reports.

Setting the Rounding Option

With reference to the section "System Options", by setting Machine Condition 20 to the related value (1, 2, 3 or 4), you can program the machine to round off the subtotal or tender values of the related currency.

Decimal Point Position

1. Control lock key position: **PRG**.
2. Type the status number [0, 1, 2 or 3] to select the desired format as indicated in the following table:

Status Number	Format
0	x
1	x.X
2	x.xx (default setting)
3	x.xxx

3. Press to set the new format.

Example: Program the cash register so that three digits are left after the decimal point.




Fraction Rounding for VAT Calculation

Fraction rounding is used to round figures with decimals up or down to the nearest whole numbers and is used for percent tax and percent discount calculations. Choose from the following three options to select the rounding as needed:

Status Number	Fraction Rounding
0	a fraction of a pence is rounded down one pence
50	a fraction under one-half pence is rounded down one pence, a fraction above one-half pence is rounded up one pence (default setting)
99	a fraction of a pence is rounded up one pence

1. Control lock position: **PRG**.
2. Type the status number [0, 50 or 99] to select the desired fraction rounding.
3. Press to store the new setting.

Example: Program the rounding code so that a fraction under one-half pence is rounded down one pence, a fraction above one-half pence is rounded up one pence.

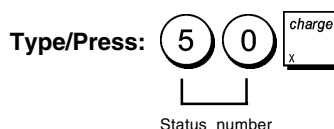


Printing VAT Information on Customer Receipts

You can program the cash register to print VAT information on the customer receipt according to your business' or country's requirements.

Programming the Cash Register to Print the Required VAT Information

With reference to the section "System Options", by setting machine conditions 61, 62, 63, 64, 65 and 66 you program the cash register to print the VAT information that you need.

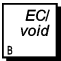1. Control lock key position: **PRG**.
2. Type the [machine condition number] followed by status number **1**, then press .
3. Turn the control lock key to the **OFF** position.

Receipt With Sum of all VAT Amounts Calculated (TL-VAT) - Machine Condition 61

DEPT 04	*15.50T4	
<hr/>		
SUBTOTAL	*33.00	
TL-VAT	*3.95	Sum of the individual VAT totals
<hr/>		
TOTAL	*33.00	
CASH	*33.00	

Receipt With Taxed Sales Totals Split per Rate - Machine Condition 62

SUBTOTAL	*33.00	
VAT1	*0.52T1	
VAT2	*0.16T2	
VAT3	*0.69T3	
VAT4	*2.58T4	VAT totals per programmed rate
<hr/>		
TOTAL	*33.00	
CASH	*33.00	

Receipt With Sales Totals With VAT Split per Rate (TXBL_W) - Machine Condition 63

DEPT 04	*15.50T4	
<hr/>		
SUBTOTAL	*33.00	
TXBL_W_1	*10.00T1	
TXBL_W_2	*2.50T2	
TXBL_W_3	*5.00T3	
TXBL_W_4	*15.50T4	Sales totals with VAT split per rate
<hr/>		
TOTAL	*33.00	
CASH	*33.00	

Receipt with Overall Sales Total With VAT (TXBL_TL_W) - Machine Condition 64

DEPT 04	*15.50T4	
<hr/>		
SUBTOTAL	*33.00	
TXBL_TL_W	*33.00	Overall sales total with VAT
<hr/>		
TOTAL	*33.00	
CASH	*33.00	

Receipt With the Sales Totals without VAT Split per Rate (TXBL_0) - Machine Condition 65

DEPT 04	*15.50T4	
<hr/>		
SUBTOTAL	*33.00	
TXBL_0_1	*9.48T1	
TXBL_0_2	*2.34T2	
TXBL_0_3	*4.31T3	
TXBL_0_4	*12.92T4	Sales totals without VAT split per rate
<hr/>		
TOTAL	*33.00	
CASH	*33.00	

Receipt With Sales Total Without VAT (TXBL_TL) - Machine Condition 66

DEPT 04	*15.50T4	
<hr/>		
SUBTOTAL	*33.00	
TXBL_TL_0	*29.05	Sales total without VAT
<hr/>		
TOTAL	*33.00	
CASH	*33.00	

Clerk System

The Clerk System is a security feature that enables you to control access to the cash register and monitor the number of transactions and the sales of up to 15 Clerks.


Your cash register is configured at the factory with the Clerk System deactivated. When the Clerk System is deactivated, the cash register can be used freely.

You can activate the Clerk System for a degree of protection and sales monitoring. With the Clerk System activated, the cash register can be used after entering just a clerk number from 1 to 15, or a clerk number and its associated 3-digit security code depending on the degree of security programmed.


With the Clerk System activated you can decide an operational status for each clerk, thus enabling all activities for the clerk or disabling the clerk from performing certain transactions.

You can also program other clerk-related features. See "System Options", Machine conditions 7, 8 and 52 for details.

Activating the Clerk System

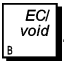1. Control lock key position: **PRG**.
2. Press **6** **1** .

Deactivating the Clerk System

1. Control lock key position: **PRG**.
2. Press **6** **0** .

Programming a Clerk Operational Status and Secret Code

With the Clerk System active, you can assign a 7-digit operational status code to each clerk that defines whether certain activities are enabled or disabled. You must then also define a 3-digit security code that the clerk will need to enter to access cash register functions.

Listed below are the activities that you can enable or disable for each clerk by using the related codes:

Void entries

0 = Disabled
1 = Enabled

Refund entries

0 = Disabled
1 = Enabled

Negative % entries

0 = Disabled
1 = Enabled

Paid Out entries

0 = Disabled
1 = Enabled

NOTE: Negative % entries and Paid Out entries must always be set to the same value (both 0 or both 1).

Negative department transactions

0 = Disabled
1 = Enabled

Coupon entries

0 = Disabled
1 = Enabled


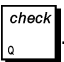
Training mode


0 = Normal clerk
1 = Training clerk

NOTE: By default, all the clerks are assigned the following 7-digit operational status code: 0000000. They are therefore programmed as Normal clerks disabled from performing the operations indicated above.

If a certain operations are disabled for a certain clerk, the same clerk can, however, still perform such operations in the Manager mode. In this case the control lock key must be switched to the MGR position so all of the activities indicated above, with the exception of operating in the Training Mode, can be performed.


With the Clerk System active:

1. Control lock key position: **PRG**.
2. Type the number **1** to **15** corresponding to the clerk you want to program and then press .
3. Type the **[VOID entries code]**, **[Refund entries code]**, **[Negative % entries code]**, **[Paid out entries code]**, **[Negative department transactions code]**, **[Coupon entries code]** and **[Training mode code]** in this order and by referring to the previous table. A 7-digit status code must be entered.
4. Press .

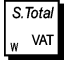

5. Define a three-digit secret code by typing three **[numeric keys]** and then press .

Example: Enable Clerk 1 for all activities, as a non-training clerk, and assign secret code 106.

Type/Press:

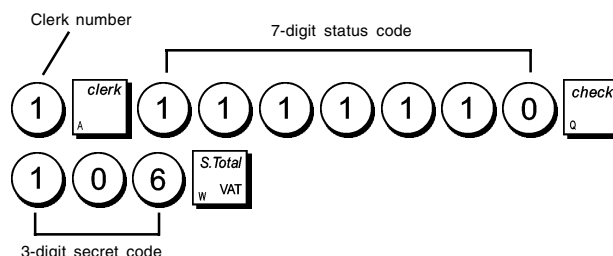

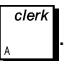


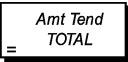
Entering a Clerk Number/Secret Code Before Cash Register Operations

1. Control lock key position: **REG** or **MGR**.
2. Type a Clerk number **1** to **15** and press .
3. Type the corresponding three-digit code (if programmed) and press .

The clerk number is displayed (1 15) to identify the clerk that is in use and that it is now possible to carry out transactions. The clerk number or programmed name is printed on the sales receipt and on the management reports.


Clerk Names

You can program a clerk name or identifier of up to 24 characters long by using the keypad or the Character Table. It will be automatically printed on all receipts, journal records and management reports.

1. Control lock key position: **PRG**.
2. Switch the cash register to the Clerk name definition mode by pressing  repeatedly until displaying the message indicating the first Clerk number.
3. To jump to a specific clerk to identify, type the clerk number **1** to **15** on the numeric keypad and then press .
4. Enter the letters or characters of the string you wish to define and then press . You are now prompted to identify the following clerk.
5. Repeat steps 3 and 4 for all desired clerk names.
6. Press  to exit.

Example: Program **Alex** as the name for Clerk number 1 by using the CAPS character table.

Type/Press:

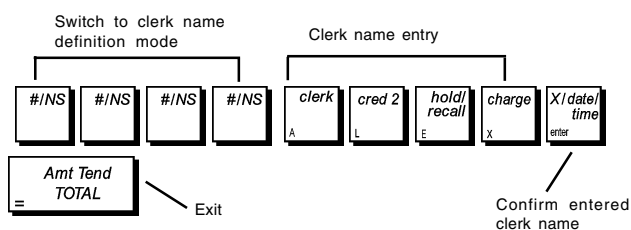

Manager Passwords

You can define two different manager passwords, one to prevent unauthorized access to the machine's **PRG** and **Z** modes and one to prevent unauthorized access to the **X** mode.

Since the management report taken in the Z mode resets transaction totals to zero, a management password prevents the accidental resetting of these totals by unauthorized personnel. The X mode password safeguards the confidentiality of transaction report data.

Defining a PRG and Z Mode Manager Password


1. Control lock key position: **PRG**.
2. Press **1 1 1 1 1 1** and then press

Amt Tend TOTAL

3. Type your 4-digit manager password and press **S.Total w VAT**.

NOTE: If you define a manager password of 0000, the password security protection feature will not work.

Example: Define manager password 9876 for the PRG and Z modes.

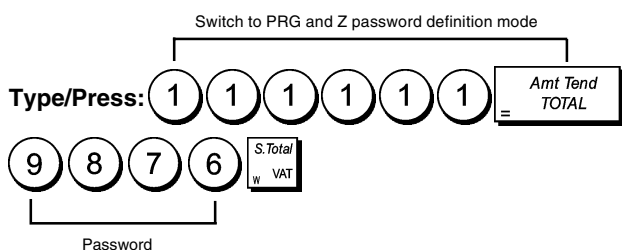

Defining an X Mode Manager Password


1. Control lock key position: **PRG**.
2. Press **2 2 2 2 2 2** and then press

Amt Tend TOTAL

3. Type your 4-digit manager password and press **S.Total w VAT**.

NOTE: If you define a manager password of 0000, the password security protection feature will not work.

Example: Define manager password 6789 for the X mode.

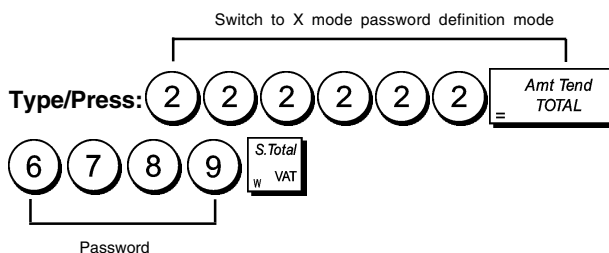

Clearing the PRG, Z and X Manager Passwords

To clear a PRG, Z or X mode password, program password

0 0 0 0 by following the instructions of sections "Defining a PRG and Z Mode Manager Password" and "Defining an X Mode Manager Password".

Using the Cash Register in a Password Protected Mode

If a manager password was defined to protect unauthorized access to the PRG, Z and X modes, proceed as follows to enter the specific password:

1. Control lock key position: **PRG**.
2. Type the specific 4-digit password.
3. Press **check**.

Training Mode

The training mode allows you to use the cash register to perform true sales transactions for learning purposes. All transactions performed in this mode are not recorded in the management financial reports and the sales receipts are not numbered consecutively.

When the cash register is switched to the training mode, all training transactions are performed in the **REG** or **MGR** mode.

You can also print a detailed training report to keep track of the transactions performed in this mode. See "Training Report" for details.

To use the training facility from the PRG mode:

1. Control lock key position: **PRG**.
2. Press **5 5 5 5 5 5** **Amt Tend TOTAL**. A line appears on the display to indicate that the cash register is in the Training Mode.
3. Turn the control lock key to **REG** or **MGR** to perform training sales transactions.

To exit the training facility from the PRG mode:

1. Control lock key position: **PRG**.
2. Press **5 5 5 5 5 5** **Amt Tend TOTAL**.


To access the training facility from the REG mode:

1. Control lock key position: **REG**.
2. Type your **[4-digit password]** and press **S.Total w VAT**.

A line appears on the display to indicate that the cash register is in the Training Mode.

To exit the training facility from the REG mode:

1. Control lock key position: **REG**.


2. Type your **[4-digit password]** and press .

Programming a Training Mode Password

A training mode password prevents unauthorized access to the training facility from the REG mode.

1. Control lock key position: **PRG**.


2. Press       and then press

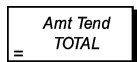

3. Type your **[4-digit password]** and press .

NOTE: Do not assign a password 0000.

Example: Define training mode password 9876.

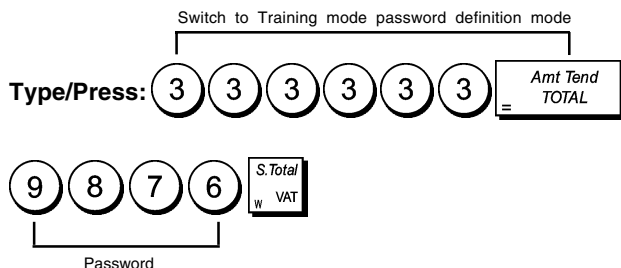

Cash Register Identification Number

The 4-digit machine identification number is printed on the sales receipts, journal records and management reports issued by the cash register. It is useful to identify the activities of this cash register when more than one cash register is used in the business.

1. Control lock key position: **PRG**.

2. Type your **[4-digit identification number]** and press




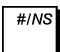
Example: Define identification number 0006.



Type/Press:     

System Options

Your cash register's system options programming feature includes a number of options for the operation of the cash register. Each of the functions described in this section is already set upon delivery of the cash register to meet the most frequent requirements.


The cash register's factory default settings, which you can reprogram at any time, are indicated in bold print in the table below. At any time you can print a report indicating how your cash register is programmed. See "Cash Register Programming Report" for details.

- 1 0 = Date format - Month/Day/Year
1 = Date format - Day/Month/Year
- 2 **0 = Time indication - 24 hour format**
1 = Time indication - 12 hour format
- 3 **0 = Language selection – English**
1 = Language selection – Spanish
2 = Language selection – French
3 = Language selection – German
4 = Language selection – Dutch
5 = Language selection – New language entry
- 4 0 = Journal record printing in REG mode
1 = Customer receipt printing in REG mode
- 5 0 = Electronic journal activated
1 = Electronic journal deactivated
- 6 **0 = Clerk system deactivated**
1 = Clerk system activated
- 7 **0 = Do not enter 3-digit secret clerk code**
1 = Enter 3-digit secret clerk code
- 8 **0 = Clerk secret code entry not required for each transaction**
1 = Clerk secret code entry required for each transaction
- 9 **0 = Cash drawer opens when pressing** 
1 = Cash drawer does not open when pressing 
- 10 **0 = Reset consecutive receipt number after Z1 report**
1 = Do not reset consecutive receipt number after Z1 report
- 11 **0 = Reset Grand Total after Z financial report**
1 = Do not reset Grand Total after Z financial report
- 12 **0 = Do not reset Z1 and Z2 counter after Z report**
1 = Reset Z1 and Z2 counter after Z report
- 13 **0 = Amount tender not compulsory**
1 = Amount tender compulsory
- 14 **0 = Allow post transaction tenders**
1 = Do not allow post transaction tenders
- 15 **0 = Allow 0 price registrations**
1 = Do not allow 0 price registrations
- 16 0 = Reserved
1 = Add-on tax calculation
2 = VAT calculation
- 17 0 = Print VAT details after tender amount
1 = Print VAT details before total amount
- 18 **0 = Assign addition and subtraction pos/neg % results to the department**
1 = Do not assign addition and subtraction pos/neg % results to the department
- 19 **0 = Divide for currency exchange calculation**
1 = Multiply for currency exchange calculation

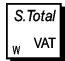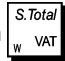
20	0 = No European rounding 1 = Special rounding selection - Swiss 0.01 – 0.02 = amount rounded to 0.00 0.03 – 0.07 = amount rounded to 0.05 0.08 – 0.09 = amount rounded to 0.10 2 = Special rounding selection - Swedish 0.00 – 0.24 = amount rounded to 0.00 0.25 – 0.74 = amount rounded to 0.50 0.75 – 0.99 = amount rounded to 1.00 3 = Special rounding selection - Danish 0.00 – 0.12 = amount rounded to 0.00 0.13 – 0.37 = amount rounded to 0.25 0.38 – 0.62 = amount rounded to 0.50 0.63 – 0.87 = amount rounded to 0.75 0.88 – 0.99 = amount rounded to 1.00 4 = Special rounding selection - Euro 0.01 – 0.03 = amount rounded to 0.00 0.04 – 0.07 = amount rounded to 0.05 0.08 – 0.09 = amount rounded to 0.10	40	Print line space value selection: 0 = 0.500 mm 1 = 0.667 mm 2 = 0.833 mm 3 = 1.00 mm 4 = 1.167 mm 5 = 1.333 mm 6 = 1.500 mm 7 = 1.667 mm 8 = 1.833 mm 9 = 2.00 mm
21	Reserved	41	0 = Disable compressed receipt printing 1 = Enable compressed receipt printing
22	0 = Issue of multiple receipts not allowed 1 = Issue of multiple receipts allowed	42	0 = Disable compressed X/Z report printing 1 = Enable compressed X/Z report printing
23	0 = Print a 10-line customer receipt header 1 = Print a 5-line customer receipt header and a 5-line customer receipt footer	43	0 = Disable compressed electronic journal report printing 1 = Enable compressed electronic journal report printing
24	0 = Do not print the header on X/Z reports 1 = Print the header on X/Z reports	44	0 = Disable compressed printing in the PRG mode 1 = Enable compressed printing in the PRG mode
25	0 = Allow duplicate Z report printing 1 = Do not allow duplicate Z-report printing	45-49	Reserved
26	0 = Allow zero skip on financial reports 1 = Do not allow zero skip on financial reports	50	0 = Print the date 1 = Do not print the date
27	0 = Set maximum 1500 PLUs and 6400 electronic journal lines 1 = Set maximum 500 PLUs and 7200 electronic journal lines	51	0 = Print the time 1 = Do not print the time
28-29	Reserved	52	0 = Print the clerk name 1 = Do not print the clerk name
30	0 = Store sales receipts only in electronic journal 1 = Full activity registration in electronic journal	53	0 = Print machine number on receipt 1 = Do not print machine number on receipt
31	0 = Warning beep will sound at the start of a transaction in an electronic journal memory nearly full condition. 1 = Warning beep will NOT sound at the start of a transaction in an electronic journal memory nearly full condition.	54	0 = Print consecutive receipt number 1 = Do not print consecutive receipt number
32	0 = Warning beep will sound at the end of a transaction in an electronic journal memory nearly full condition. 1 = Warning beep will NOT sound at the end of a transaction in an electronic journal memory nearly full condition.	55	0 = Print the subtotal when  is pressed 1 = Do not print the subtotal when  is pressed
33-39	Reserved	56	0 = Print the consecutive Z1/Z2 counter 1 = Do not print the consecutive Z1/Z2 counter
		57	0 = Print the Grand Total 1 = Do not print the Grand Total
		58	0 = Print the No-sale receipt 1 = Do not print the No-sale receipt
		59	0 = Print refund total on financial report 1 = Do not print refund total on financial report
		60	0 = Do not print tax rate on financial report in VAT mode 1 = Print tax rate on financial report in VAT mode
		61	0 = Do not print total tax amount on sales receipt 1 = Print total tax amount on sales receipt
		62	0 = Do not print tax amount split per rate on sales receipt 1 = Print tax amount split per rate on sales receipt

- 63 **0 = Do not print taxable amount split per rate on sales receipt**
 1 = Print taxable amount split per rate on sales receipt
- 64 **0 = Do not print total taxable amount on sales receipt**
 1 = Print total taxable amount on sales receipt
- 65 **0 = Do not print taxable amount out of VAT split per rate on sales receipt**
 1 = Print taxable amount out of VAT split per rate on sales receipt
- 66 **0 = Do not print total taxable amount out of VAT split per rate on sales receipt**
 1 = Print total taxable amount out of VAT split per rate on sales receipt
- 67 0 = Do not print tax symbol on the right-hand side of amount
 1 = **Print tax symbol on the right-hand side of amount**

Changing the Cash Register's Standard Settings

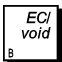
- Control lock key position: **PRG**.
- Type the **[number]** of the machine condition (1-67 as indicated in the table) that you wish to change.
- Type the **[number]** of the required setting.
- Press .

Example: Program the cash register to issue multiple receipts.

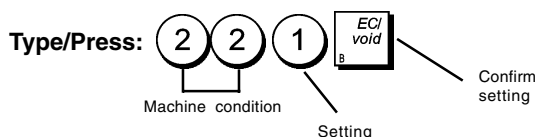




Cash Register Programming Reports




This section explains how to print the different reports that show how your cash register is programmed. These reports are all taken in the PRG mode.

To stop the printing of a report, press and hold down .




Department Programming Report

- Control lock key position: **PRG**.
- Type   and then press .




Department Range Programming Report

- Control lock key position: **PRG**.
- Type  .
- Type the department number **[01 - 99]** that you want to start from.
- Type the department number **[01 - 99]** that you want to end at.
- Press .




Department-Department Group Link Report

- Control lock key position: **PRG**.
- Type  .
- Type the department group number **[00 - 10]** for which to view a list of the associated departments.
- Press .




PLU Programming Report

- Control lock key position: **PRG**.
- Type   and then press .

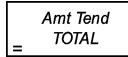


PLU Range Programming Report

- Control lock key position: **PRG**.
- Type  .
- Type the PLU number **[0001 - 1500]** that you want to start from.
- Type the PLU number **[0001 - 1500]** that you want to end at.
- Press .

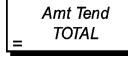


PLU-Department Link Report

- Control lock key position: **PRG**.
- Type  .
- Type the department number **[01 - 99]** for which to view a list of the associated PLUs.
- Press .

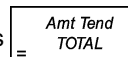


Clerk Programming Report

- Control lock key position: **PRG**.
- Type   and then press .

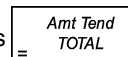


Overall Cash Register Programming Report

- Control lock key position: **PRG**.
- Type   and then press .

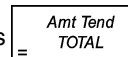Header/Footer Strings Programming Report


- Control lock key position: **PRG**.
- Type   and then press .

Foreign Currency Strings Programming Report

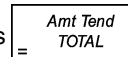- Control lock key position: **PRG**.
- Type   and then press .


Credit Card Strings Programming Report

1. Control lock key position: **PRG**.

2. Type **8** **3** and then press .


New Language Entry (10-character Strings) Programming Report

1. Control lock position: **PRG**.

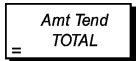2. Type **9** **0** and then press .

New Language Entry (24-character Strings) Programming Report

1. Control lock position: **PRG**.

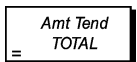2. Type **9** **1** and then press .

Management Reports

Transaction data is maintained in the memory of the cash register as long as the battery back-up system is in effect. This data can be printed as a report for management review. The Management Report can be printed from either the X or Z position on the control switch.

X and Z Reports

Turning the control lock key to the **X** position prints the accumulated transaction information and **RETAINS ALL TOTALS IN MEMORY**. Take this report any time of the day to print periodic reading of the transactions performed (some users call the X report a mid-day report). X reports include the PLU Report, Clerk Report, and the X1 and X2 Financial Reports.

Turning the control lock key to the **Z** position prints the same information as the X report. The only difference is that after a Z report printout **ALL TRANSACTION TOTALS ARE RESET TO ZERO**, except for the grand total unless programmed otherwise in the system options programming mode. This report is usually taken at the end of the day so that all the transaction totals are cleared to start from zero the following day.

NOTE: To prevent the accidental printing of the Z report, assign a PRG and Z mode manager password as explained in the section entitled "Defining a PRG and Z Mode Manager Password".

An **X2** report is called a period-to-date financial report which is usually taken on a weekly basis. It accumulates all the transaction totals. A **Z2** report is the same as an X2 report with the exception that all the transaction totals are reset to zero after it is taken. It is usually taken as a monthly sales report to view end-of-month sales totals for each department.

NOTE: Before printing a management report, make sure that you have plenty of paper loaded in the cash register.

Z1/Z2 Financial Report Counter Programming

You can override the cash register's default Z1/Z2 financial report counter by programming the number from which you want the counter to start counting consecutively each time a financial report is printed.

1. Control lock key position: **PRG**.

2. Press **1** for the Z1 report counter, or press **2** for the Z2 report counter.

3. Type a number **[0001 to 9999]** from which you want the cash register to start counting each Z1 or Z2 report.


4. Press .

Grand Total Programming

You can program the transaction grand total value printed on the management reports.

1. Control lock key position: **PRG**.


2. Press **7** **7** **7** **7** **7** **7** and then press

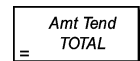
.

3. Type your grand total value of a maximum 12 digits.


4. Press .


X1 and Z1 Financial Reports

NOTE: If you run out of paper during the printing of a Z report, you can print only one duplicate report by pressing .

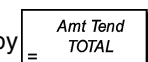followed by .

1. Control lock key position: **X** or **Z** (bear in mind that a Z1 printout resets all totals to zero).

2. If a PRG and Z mode, or X mode, manager password was defined type the **[4-digit password]** and press .

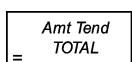3. Press .

	18:40	17-08-2005	Consecutive receipt number
	MC NO.0006	0112	
X report identifier	X 1	0003	X counter
	DEPT 01	037	Department 1 activity counter
Department number or assigned name		*477.00T1	
	DEPT 02	051	Department 1 sales total
		*1259.62T2	
	DEPT 03	052	
		*1524.00T3	
	DEPT 04	037	
		*898.00T4	
		004	
	DEPT 07	*51.80	Sales total for all departments
	DEPT TOTAL	*4210.42	
	VAT1	*24.83	
	TXBL..0..1	*452.17	
	TXBL..W..1	*477.00	
	VAT2	*91.17	
	TXBL..0..2	*910.45	
	TXBL..W..2	*1001.62	
	VAT3	*243.38	
	TXBL..0..3	*1280.62	Total amount VAT 1, 2, 3 and 4
	TXBL..W..3	*1524.00	
	VAT4	*149.65	
	TXBL..0..4	*748.35	
	TXBL..W..4	*898.00	
	TL-VAT	*509.03	
Percent add-on total	TXBL..TL..0	*3391.59	Coupon (-) total
	TXBL..TL..W	*3900.62	
	COUPON	*-258.00	Percent discount total
Net sales total in local currency	TL-#1	*-34.98	
	TL-#2	*17.10	
	NET	*3952.42	Refund total
	REFUND	*-207.00	
Void total	VOID/CORR	*-220.00	Gross sales total
	GROSS	*4637.42	
Cash sales counter	CASH	060	Cash sales total
		*1664.42	
Check sales counter	TL-CHECK	008	Check sales total
		*645.00	
Charge sales counter	TL-CHARGE	010	Charge sales total
		*1120.00	
Card 1 sales counter	CARD1	005	Card 1 sales total
		*348.00	
Card 2 sales counter	CARD2	002	Card 2 sales total
		*175.00	
Received on account counter	TL-RECD AC	001	Received on account total
		*150.00	
Paid out counter	T-PAID OUT	001	Paid out total
	FC 1 *1.471	*-250.00	
Foreign currency rate and sales total	TL-NS	005	Cash in drawer total
	C-I-D	*1555.87	
No sale counter	CHECK ID	*645.00	Check in drawer total
Charge in drawer total	CHARGE ID	*1128.55	
Card 1 in drawer total	C. CRED1 ID	*348.00	
Card 2 in drawer total	C. CRED2 ID	*175.00	
	GT	*1846.28*	Grand total

X2 and Z2 Financial Reports

- Control lock key position: **X** or **Z** (bear in mind that a Z2 printout resets all totals to zero).
- If a PRG and Z mode, or X mode, manager password was

defined type the **[4-digit password]** and press .

- Type **9 9** and press .

Cash in Drawer Report

This report tells you the financial status of your cash drawer. It provides the totals for cash, check, charge, credit 1 and credit 2 payments.

- Control lock key position: **X** or **Z** (bear in mind that a Z Clerk Report resets all totals).
- If a PRG and Z mode, or X mode, manager password was

defined type the **[4-digit password]** and press .

- Press .

16:57	17-08-2005		
MC NO.0006	0103		
C-I-D	*870.67		Cash in drawer total
CHECK ID	*358.06		Check in drawer total
CHARGE ID	*143.05		Charge in drawer total
C CRED1 ID	*255.00		Credit 1 in drawer total
C CRED2 ID	*293.00		Credit 2 in drawer total

Clerk Report

This report lists the number of transactions and sales totals for each Clerk. At the end of the receipt you are given the sales total of all clerks.

- Control lock key position: **X** or **Z** (bear in mind that a Z Clerk Report resets all totals).
- If a PRG and Z mode, or X mode, manager password was



defined type the **[4-digit password]** and press .

- Press .

Time	18:36	17-08-2005	Consecutive receipt number
	MC NO.0006	0059	
Clerk 1 number or assigned name	CLERK REPORT	X	X report identifier
	CLERK 01		
Activity counter for Clerk 1	0021	*524.35	Sales total of clerk 1
	CLERK 02		
	0033	*790.35	Sales total of clerk 2
Activity counter for Clerk 2	CLERK 03		
	0006	*81.50	
	CLERK 04		
	0000	*0.00	
	CLERK 15		
	0000	*0.00	
	TL-CLERK	*1396.20	Sales total of all clerks

PLU Sales Report



This report provides the number of times a particular PLU is used, the totals for that number and the sales total for all PLUs.

1. Control lock key position: **X** or **Z** (bear in mind that a Z PLU Report resets all PLU totals to zero).
2. If a PRG and Z mode, or X mode, manager password was defined type the **[4-digit password]** and press .
3. Press .

16:58	17-08-2005	Date
MC NO.0006	0104	X report identifier
PLU REPORT	X	
	003	
PLU 0001	*8.07	PLU quantity sold
PLU 0002	*16.00	PLU sales total
PLU 0003	*77.00	
PLU 0004	*70.00	
PLU 0005	*4.00	
PLU 0006	*26.00	



PLU Range Sales Report

This report provides the same transaction information as the PLU Sales Report but pertaining to a defined range of PLUs.

1. Control lock key position: **X** only.
2. If an X mode manager password was defined, type the **[4-digit password]** and press .
3. Type the PLU number **[0001 - 1500]** that you want to start from.
4. Type the PLU number **[0001 - 1500]** that you want to end at.
5. Press .



Department Range Sales Report

This report provides the number of transactions performed by the departments within the defined range, and their related sales totals.

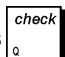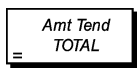1. Control lock key position: **X** only.
2. If an X mode manager password was defined, type the **[4-digit password]** and press .
3. Type the department number **[01-99]** that you want to start from.
4. Type the department number **[01-99]** that you want to end at.
5. Press .



Department Group Sales Report

This report provides the same information as a Department range Sales Report, but for all the departments associated to the defined department group.

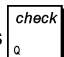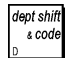1. Control lock key position: **X** only.
2. If an X mode manager password was defined, type the **[4-digit password]** and press .
3. Type the department group number **1** to **10**. To issue a report containing the sales of the departments of all the department groups, type **11**.
4. Press .



Time Report

The time report provides the net total sales performed by the cash register on an hourly basis.

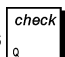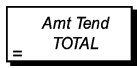1. Control lock key position: **X** or **Z** (bear in mind that a Z time report resets all time totals to zero).
2. If a PRG and Z mode, or X mode, manager password was defined type the **[4-digit password]** and press .
3. Type **11** and then press .


Training Report


This report provides an X or Z report of the transactions performed in the training mode. Like the ordinary X and Z financial reports, a Z report resets all transaction totals to zero and provides the same information as an ordinary X or Z financial report with the exception that the report identifier is "X0" or "Z0".

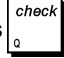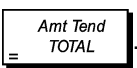1. Control lock key position: **X** or **Z**. Bear in mind that in the Z position the training report contents are cleared.
2. If a training mode password was defined, type the **[4-digit password]** and press .
3. Press **88** .

Electronic Journal Reports



An electronic journal report executed with the control switch in the X position does not clear the electronic journal memory (and therefore all transaction data are retained) **while the report executed with the control switch in the Z position cancels electronic journal memory thus restoring it to its maximum 6,400 or 7,200 line capacity programmed.**

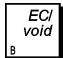To momentarily interrupt report printing, press . Press this key again to resume printing.

To cancel report printing, press .

Complete Electronic Journal Report



This report is a complete listing of transaction receipts and Z financial reports taken within the maximum 6,400 or 7,200 line capacity programmed.

1. Control lock key position: **X** or **Z**. Bear in mind that in the Z position the electronic journal memory contents are cleared. Make sure there is plenty of paper loaded in the printer.
2. If a PRG and Z mode, or X mode, manager password was defined type the **[4-digit password]** and press .
3. Press .

When the contents of the electronic journal are printed, a message is displayed along with a beep to indicate that the EJ memory capacity has been restored to its programmed 6,400 or 7,200 lines.


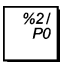
Oldest Transaction Report

By entering the number of transactions you wish to view, this report prints the selected number of oldest receipts and Z financial reports performed and stored within the programmed 6,400 or 7,200 line capacity.

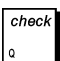1. Control lock key position: **X** or **Z**. Bear in mind that in the Z position the journal report contents are cleared. Make sure there is plenty of paper loaded in the printer.
2. If a PRG and Z mode, or X mode, manager password was defined type the **[4-digit password]** and press .
3. Type a number between **[001 and 999]** indicating the number of oldest reports wanted and press .

Latest Transaction Report


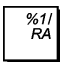
By entering the number of transactions you wish to view, this report prints the most recent receipts and Z financial reports performed and stored within the programmed 6,400 or 7,200 line capacity.

1. Control lock key position: **X** or **Z**. Bear in mind that in the Z position the journal report contents are cleared. Make sure there is plenty of paper loaded in the printer.
2. If a PRG and Z mode, or X mode, manager password was defined type the **[4-digit password]** and press .
3. Type a number between **[001 and 999]** indicating the number of latest reports wanted and press .

Daily Report




By entering the number of Z financial reports that you wish to view, this report prints the receipts recorded before the defined Z financial report along with the report itself.

1. Control lock key position: **X** or **Z**. Bear in mind that in the Z position the journal report contents are cleared. Make sure there is plenty of paper loaded in the printer.

2. If a PRG and Z mode, or X mode, manager password was defined type the **[4-digit password]** and press .
3. Type a number between **[01 and 99]** indicating the number of oldest end-of-day reports wanted and press .




Sales Transactions

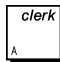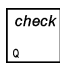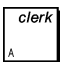Entering and Exiting the Register Mode

1. Unlock the printer compartment and turn the control lock key to the REG mode.
2. If the Clerk System option was set to active and a clerk code was programmed, enter the related Clerk number assigned, press , type the associated three-digit secret code and then press . If the Clerk System option was set to active and a secret code was not programmed, type any Clerk number and then press .




Date and Time Display

You can display the current date and time outside of a sales transaction and with the cash register in the REG mode.

Press  to display the date,   to display the time.

Electronic Journal Capacity Display

If the electronic journal was activated, you can also display the number of sales data lines still available in the journal's

memory. Press    outside of a sales transaction and with the cash register in the REG mode. The value is displayed on the upper line of the operator display.

Sample Receipts

The following receipt is a typical receipt issued by the cash register.

Customer receipt header with max. 24 characters per line

```

*****
*   YOUR RECEIPT   *
*   THANK YOU      *
*                  *
*****
HAVE A NICE DAY
PLEASE COME AGAIN
  
```

Time	16:39	Date	17-08-2005
Machine number	MC NO.0006	Consecutive receipt number	0060
Clerk number or assigned name	CLERK 01		
Departments	DEPT 01	Item price with department VAT rate identifier	*10.00T1
	DEPT 02		*2.50T2
	DEPT 07		*12.95
	DEPT 03	Item price in non-taxable department	*5.00T3
	DEPT 04		*15.50T4

	SUBTOTAL		*45.95
Cash tendered	TOTAL		*45.95
	AMOUNT	Total balance due	*50.00
	CHANGE	Change due	*4.05

The following example receipt containing the least information possible. To obtain this receipt, program system options 50, 51, 52, 53, 54, 55 and 67 accordingly. See "System Options" for details.

Customer receipt header with max. 24 characters per line

```

*****
*   YOUR RECEIPT   *
*   THANK YOU      *
*                  *
*****
HAVE A NICE DAY
PLEASE COME AGAIN
  
```

Departments	DEPT 01	Item price	*10.00
	DEPT 02		*2.50
	DEPT 07		*12.95
	DEPT 03		*5.00
	DEPT 04		*15.50

	TOTAL		*45.95
Cash tendered	AMOUNT	Total balance due	*50.00
	CHANGE	Change due	*4.05


Receipt On/Off

Outside of a sales transaction, the cash register can be switched to the non-print mode where the transactions performed in the REG mode will not be printed. In the non-print mode, the sales totals will be maintained and the management reports will print.

1. Control lock key position: **REG**

2. Press 

NOTE: If you set System Option **22** to **1** (Print multiple receipts) as explained in section "System Options", you can override this setting and print the receipt of the last sales

transaction performed by pressing  for as many receipts wanted.

Exiting the Non-Print Mode


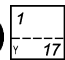
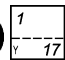
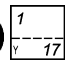

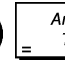

1. Control lock key position: **REG**

2. Press 

Registering a Single Item Sale with Change Tender

Up to eight digits can be used for the amount of the entry.







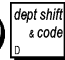
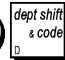







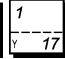
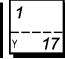
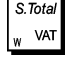
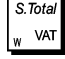
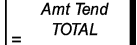
Example: Register a £1.00 item in Department 1. Compute change for £5.00.

1. Press    
2. Press   

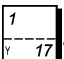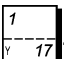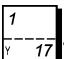The transaction is ended and the change due to the customer is displayed.
















Registering a Multiple Item Sale with Exact Cash Tender

Example: Register a £2.50 item to Department 1, a £0.50 item to Department 45 and a £1.65 item to Department 17, with an exact tender of £4.65.

1. Press     
2. Press      
3. Press      
4. Press  
5. Press 

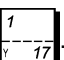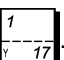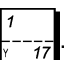Registering a Multiple Item Sale with Exact Cash Tender in Foreign Currency

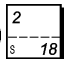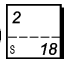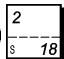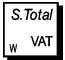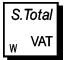
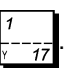
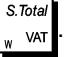
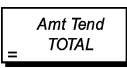
Example: Register a £10.00 item to Department 1, a £20.00 item to Department 2, with an exact tender in foreign currency.

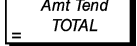1. Press     
2. Press     
3. Press   to display and print the current balance due in Local currency.
4. Press  for foreign currency number 1 programmed and press  to display the current balance due in the foreign currency.
5. Press 

Registering a Sale of Multiple Items at Same Cost





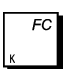
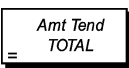
Up to two digits can be used for the quantity multiplied.

Example: Multiply two items costing £1.50 and register the sale to Department 1. Compute change for £5.00.

- Press **2** .
- Press **1** **5** **0** .
- Press .
- Press **5** **00** . The change due to the customer is displayed.





Registering a Multiple Department Sale with Payment in Foreign Currency and Change Tender in Local Currency

Example: Register a £69.99 item to Department 1, a £5.99 item to Department 4 and a £3.50 item to Department 18. Compute change for €150.00.

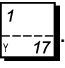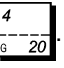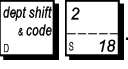- Press **6** **9** **9** **9** .
- Press **5** **9** **9** .
- Press **3** **5** **0** .
- Press  to display and print the current balance due in Local currency.
- Press **1** for foreign currency number 1 programmed and press  to display the current balance due in foreign currency.
- Type the amount tendered in foreign currency **1** **5** **0** **00** and press . The change due to the customer is displayed.




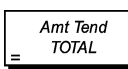
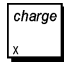
Registering a Charge Transaction

Example: Register a £2.50 item to Department 1 and a £3.00 item to Department 2 as a charge transaction.

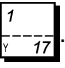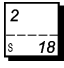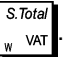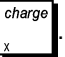- Press **2** **5** **0** .
- Press **3** **00** .
- Press .
- Press .




Split Cash/Charge Tendering

Example: Register a £10.00 item and a £15.00 item to Department 2. Split the amount tendered between £20.00 cash and £5.00 charge.

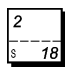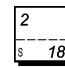- Press **1** **0** **00** .
- Press **1** **5** **00** .
- Press .
- Press **2** **0** **00** . The remaining balance due (5.00) is displayed.
- Press .




Credit 1 Tendering

Example: Register a £120.00 item to Department 2 and a £50.00 item to Department 3. Complete the transaction with payment using a credit or debit card.

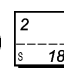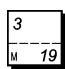- Press **1** **2** **0** **00** .
- Press **5** **0** **00** .
- Press .



Credit 2 Tendering

Example: Register a £120.00 item to Department 2 and a £50.00 item to Department 3. Complete the transaction with payment using a different credit or debit card with respect to the one used for a Credit 1 tender.

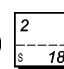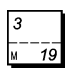- Press **1** **2** **0** **00** .
- Press **5** **0** **00** .
- Press .

Check Tendering

Example: Register a £70.00 item paid by check to Department 4.

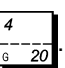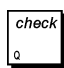- Press **7** **0** **00** .
- Press .

Check Tender with Change

Example: Register a £19.50 item to Department 4, a £2.50 item to Department 5 and a £5.00 item to Department 29. Compute the change for a £30.00 check tender.

- Press **1 9 5 0** **4** **20**.
- Press **2 5 0** **5** **21**.
- Press **5 00** **dept shift & code** **13** **29**.
- Press **S.Total** **W VAT**.
- Press **3 0 00** **check** **0**. The change due to the customer is displayed.

Check Tender in Foreign Currency with Change in Local Currency

Example: Register a £19.50 item to Department 4, a £2.50 item to Department 5 and a £5.00 item to Department 28. Compute the change in Local currency for a € 40.00 check tender.

- Press **1 9 5 0** **4** **20**.
- Press **2 5 0** **5** **21**.
- Press **5 00** **dept shift & code** **12** **28**.
- Press **S.Total** **W VAT** to display and print the current balance due in Local currency.
- Press **1** for foreign currency number 1 programmed and press **FC** **K** to display the current balance due in foreign currency.
- Type the amount tendered by check in foreign currency **4 0 00** and press **check** **0**. The change due in local currency is displayed.

Split Check/Cash Tender

Example: Register a £24.00 item to Department 1, a £36.00 item to Department 3 and a £4.00 item to Department 4. Split the tender between £60.00 check and £4.00 cash.

- Press **2 4 00** **1** **17**.
- Press **3 6 00** **3** **19**.
- Press **4 00** **4** **20**.
- Press **S.Total** **W VAT**.

- Press **6 0 00** **check** **0**. The remaining balance due is displayed.
- Press **=** **Amt Tend TOTAL**.

Registering a Single and Multiple (-) Reduction (Coupon)

Up to 8 digits can be used for the amount of the transaction.

Example: Register a £0.10 reduction (coupon) on a £2.00 item to Department 2 and a £1.00 discount on the sale of 3 items costing £5.00 each to Department 52.

- Press **2 00** **2** **18**.
- Press **1 0** **(-)**.
- Type the number of the multiple item sale **3**, press **X1 date/ time** **enter** and then enter the unit price **5 00**.
- Press **dept shift & code** **5 2** **dept shift & code**.
- Type the number of items of the multiple item sale to be discounted by pressing **3** followed by **X1 date/ time** **enter** and then type the discount **1 00** followed by **(-)**.
- Press **=** **Amt Tend TOTAL**.

Discounting the Total Sale Using a Programmed Discount Rate

Example: Register a programmed 10% discount to an entire sales transaction. Compute the change tender.

The **%1/ RA** key must have been programmed to apply percent discounts.

- Press **2 5 0** **1** **17**.
- Press **9 9** **3** **19**.
- Press **S.Total** **W VAT**.
- Press **%1/ RA**. The amount discounted is displayed.
- Press **S.Total** **W VAT**.
- Press **5 00** **=** **Amt Tend TOTAL**. The change due to the customer is displayed.

Discounting the Total Sale by Using a Random Discount Rate

Up to 4 digits can be used for the discount percentage (0.01 - 99.99%).

Example: Register a 20% discount to a sales transaction.

Compute the change tender. The $\frac{\%2}{P0}$ key must have been programmed to apply percent discounts.

1. Press $\frac{2}{5} \frac{9}{1} \frac{17}{17}$.
2. Press $\frac{1}{2} \frac{5}{18} \frac{2}{18}$.
3. Press $\frac{S.Total}{W VAT}$.
4. Press $\frac{2}{0} \frac{\%2}{P0}$. The amount discounted is displayed.
5. Press $\frac{S.Total}{W VAT}$.
6. Press $\frac{5}{00} \frac{Amt Tend}{TOTAL}$. The change due to the customer is displayed.

Discounting Individual Items using Programmed and Random Discount Rates

Example: Register a £2.50 item to Department 1, apply the programmed discount to a £3.50 item to Department 23 and apply a discount rate of 3% to a £5.00 item to Department 2. Compute change tender. The $\frac{\%2}{P0}$ key must have been programmed to apply percent discounts.

1. Type $\frac{2}{5} \frac{0}{1} \frac{17}{17}$.
2. Type $\frac{3}{5} \frac{0}{7} \frac{dept shift \& code}{N 23} \frac{18}{18}$.
3. Press $\frac{\%2}{P0}$ to apply the programmed discount. The amount discounted is displayed.
4. Press $\frac{5}{00} \frac{2}{18} \frac{18}{18}$.
5. Press $\frac{3}{\%2}{P0}$. The amount discounted is displayed.
6. Press $\frac{S.Total}{W VAT}$.
7. Press $\frac{1}{1} \frac{00}{Amt Tend TOTAL}$. The change due to the customer is displayed.

Applying the Programmed Percent Plus Rate to a Total Sale

Example: Register a programmed 10% add-on to an entire sales transaction. Compute the change tender.

The $\frac{\%1}{RA}$ key must have been programmed to apply percent add-ons.

1. Press $\frac{2}{5} \frac{0}{4} \frac{20}{20}$.
2. Press $\frac{9}{9} \frac{3}{19} \frac{19}{19}$.
3. Press $\frac{S.Total}{W VAT}$.
4. Press $\frac{\%1}{RA}$. The amount added-on is displayed.
5. Press $\frac{S.Total}{W VAT}$.
6. Press $\frac{5}{00} \frac{Amt Tend}{TOTAL}$. The change due to the customer is displayed.

Applying a Random Percent Plus Rate to a Total Sale

Up to 4 digits can be used for the percent plus rate (0.01 - 99.99%).





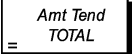
Example: Register a 20% percent add-on to a sales transaction. Compute the change tender. The $\frac{\%1}{RA}$ key must have been programmed to apply percent add-ons.

1. Press $\frac{2}{5} \frac{9}{1} \frac{17}{17}$.
2. Press $\frac{1}{2} \frac{5}{18} \frac{2}{18}$.
3. Press $\frac{S.Total}{W VAT}$.
4. Press $\frac{2}{0} \frac{\%1}{RA}$. The amount discounted is displayed.
5. Press $\frac{S.Total}{W VAT}$.
6. Press $\frac{5}{00} \frac{Amt Tend}{TOTAL}$. The change due to the customer is displayed.

Registering a Sales Transaction Using Preset PLU Item Prices





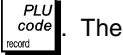


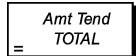
To use this feature, PLU item prices must have been previously programmed.

Example: Use preset PLU item prices to register an entire transaction: register PLU 1 and multiply 3 PLU 2. End the transaction with an exact cash tender.

1. Press .
2. Press  . The amount of the multiplication is displayed.
3. Press .
4. Press .








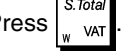



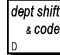

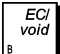
Overwriting a Preset PLU Price

Example: Overwrite the preset PLU 1 with £3.50. Computer change for a £5.00 tender.

1. Press    .
2. Press .
3. Press .
4. Press  . The change due to the customer is displayed.




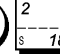
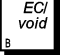






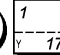






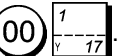

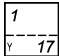
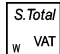
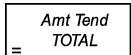
Voiding a Complete Sales Transaction

Example: Register a £2.50 item to Department 1, a £5.00 item to Department 66 and a £1.65 item to Department 20, then void the entire transaction.

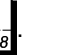1. Press    .
2. Press    .
3. Press    .
4. Press .
5. Press .






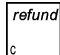

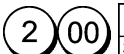
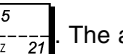
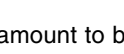

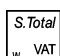
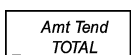
Voiding the Previous Entry in the Middle of a Sale

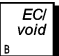Example: Void a £2.50 entry erroneously made to Department 2. Then register a £3.00 item to this same Department. Then void an incorrect £10.00 entry. End the transaction with an exact cash tender.

1. Press    .
2. Press . The amount voided is displayed and printed.
3. Press   .
4. Press    .
5. Press   .
6. Press      .
7. Press .
8. Press .



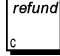

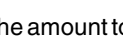




Refunding Multiple Items






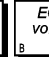






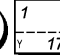





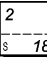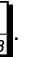


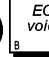
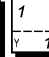
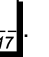
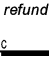



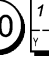
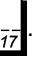

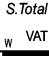
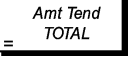
Example: Refund a £4.99 item to Department 4 and three £2.00 items to Department 5.

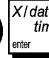1. Press .
2. Press    . The amount to be refunded is displayed.
3. Press .
4. Press     . The amount to be refunded is displayed.
5. Press .
6. Press .

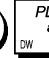Registering Multiple Void and Refund Transactions

Example: Overwrite the preset PLU 6 with £3.00, register the sale of a £2.50 item to Department 1, and of a £1.00 item to Department 2. Void the £3.00 sale to PLU 6 and then register the sale of four £5.00 items to PLU 6. Void the sale of the £2.50 item previously made to Department 1 and then refund 3 items costing £4.00 each. Subtotal the sale and end the transaction with an exact cash tender.

1. Press     .
2. Press    .

3. Press    .
4. Press       .
5. Press       .
6. Press      .
7. Press       .
8. Press .
9. Press .

Registering Money Received on Account

Up to 8 digits can be used for registering money received on account.

Example: Register £200.00 received on account.







1. Press     .

The cash drawer opens and the transaction is recorded on receipt.

Registering Negative Department Transactions





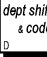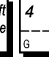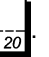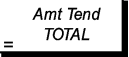




As prerequisite to negative department transactions, program a normal department to a negative status as explained in section "Program the Departments". These transactions are useful when the clerk pays back money to the customer, such as the refund of a deposit.

Example: With Department 20 activated for Single, negative item sales, register a deposit refund of £1.00 for the return of bottles.

1. Press     .
2. Press .

Registering Product Quantity Transactions

Example: Register the sale of 1.5 Kg of apples costing £3.00 per kilogram to Department 3.

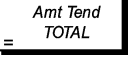1. Press        .
2. Press .

Paying Money Out

Up to 8 digits can be registered for money paid out.

Example: Pay out £150.00.








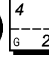
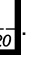
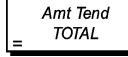
1. Press     .

The cash drawer opens and the transaction is recorded on receipt.

Registering an Identification Number to a Transaction

Up to 10 digits can be used for the identification number. This entry can be made prior to any operation. The identification number is not added to the management report or totals.

Example: Assign the identification number 3459 to a £1.00 sale to Department 4. Enter an exact cash tender sale.

1. Press     .
2. Press    .
3. Press .

Registering a No Sale

This operation opens the cash drawer and prints a no sale receipt. The activity is registered to the activity counter in the financial report.


If you do not want to print a no sale receipt, change Machine Condition 58 to 1. See "System Options" for details.

1. Press .






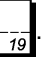
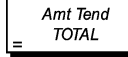

Issuing a Copy of the Last Sales Receipt

You can print one or more copies of the last receipt issued. **For this feature to be operational, Machine Condition 22 must be set to 1 (Print multiple receipts).** See "System Options" for details.

To be able to issue a copy of the last sales receipt, the cash register can accumulate a maximum of 60 transaction lines in Random Access Memory (RAM). If the last sales receipt has more than 60 lines, the copy will only provide the resulting sales total.

NOTE: This feature will override the non-print mode, if previously activated, by pressing  outside of a transaction.

Example: Register a £13.50 sale to Department 3 and enter an exact cash tender sale. Print a copy of the sales receipt.

1. Press      .
2. Press .
3. Press .

Holding and Recalling a Sales Transaction

You can temporarily put a sales transaction on hold, start and conclude a separate transaction in the mean time, then recall and conclude the held transaction. This allows the clerk to serve a second customer to avoid delays if for any reason the customer being currently served is not ready to finalize the transaction.

Only one transaction can be held at a time.

Example: Register a £13.50 sale to Department 3 and a £23.00 sale to Department 2. Subtotal the transaction and then put it on Hold. Serve another customer by registering the sale of a £2.00 item to Department 4, a £5.00 item to Department 17 and finalizing the sale with a Credit card 1 tender. Recall the suspended transaction, register the sale of a £4.50 item to Department 40 and finalize the transaction with a check tender.

1. Type **1 3 5 0** and press **3**, then type **2 3 00** and press **2**.

2. Press **S.Total**.

3. Press **hold/recall**. A line is displayed to indicate that the transaction was put on hold. Tear off the sales receipt and put it aside.

4. Start the second transaction. Type **2 00** and press **4**, then type **5 00** and press **dept shift & code**.

5. Press **cred 1** to finalize the second transaction. A beep sounds to remind you to conclude the transaction that you previously put on hold.

6. Press **hold/recall**. The transaction that was put on hold resumes from where you left off.

7. Type **4 5 0** and press **dept shift & code**.

8. Finalize the transaction by pressing **check**.

Transferring a Finalized Payment to Another Means of Payment

Upon conclusion of a sales transaction, you can transfer the payment just made to another form of payment. This is particularly useful if the customer decides to pay with another means after the finalization of the sales transaction.

Payment transfers also allow you to give the customer cash back as long as the payment is transferred to a cash tender and you specify an amount that is greater than the sales transaction total.

Payment transfer operations can be performed only once after finalization. No receipt is issued, but the transfer is recorded in the management reports. Payment transfers do not apply to tenders with foreign currencies.

Example: Register a £5.00 sale to Department 3 and a £23.00 sale to Department 2 as a charge transaction. Transfer a £50.00 payment to a cash tender with a cash back to the customer.

1. Type **5 00** and press **3**, then type **2 3 00** and press **2**.

2. Press **charge**.

3. Press **pay trans**, type **5 0 00** and then press **Amt Tend TOTAL**. The cash drawer opens and the cash back amount due to the customer is displayed.

After-Tender Change Transactions

Allowed only for cash tenders, with this feature the clerk can finalize a sales transaction as an exact cash tender and then afterwards register the cash collected from the customer and give the required change.

Example: Register a £5.00 sale to Department 3 and a £23.00 sale to Department 2 as an exact cash tender. Register the collection of £50.00 and compute the related change.

1. Type **5 00** and press **3**, then type **2 3 00** and press **2**.

2. Press **Amt Tend TOTAL**.

3. Type the cash collected **5 0 00** and then press **Amt Tend TOTAL**. The cash drawer opens and the change due to the customer is displayed.

CAPTION TABLE

Line	Description	Digit	ENGLISH	ESPAÑOL	FRANÇAIS	DEUTSCH	NEDERLANDS
1	COUPON	10	COUPON	CUPON	COUPON	MINUS	REDUCTIE
2	TOTAL COUPON	10	TL-COUPON	TL-CUPON	TL-COUPON	MINUS	TL_REDUCT.
3	DISCOUNT	10	DISCOUNT	DESCUENTO	REMISE	RABATT	KORTING
4	ADD ON	10	ADD ON	INCREMENTO	MAJORATION	AUFSCHLAG	TOESLAG
5	CHARGE	10	CHARGE	CARGO	CREDIT	KREDIT	BET_OP_REK
6	TOTAL CHARGE	10	TL-CHARGE	TL-CARGO	TL-CREDIT	TL-KREDIT	TL_OP_REK
7	VOID/CORRECTION	10	VOID/CORR	ANUL/CORRC	CORR/ANNUL	STORNO	ANNUL/CORR
8	TOTAL VOID/CORRECTION	10	TL-VD/CORR	ANUL/CORRC	TL-COR/NUL	STORNO	T_ANN/CORR
9	SUBTOTAL	10	SUBTOTAL	SUBTOTAL	SOUS-TOTAL	ZWSUMME	SUBTTL
10	CHANGE	10	CHANGE	CAMBIO	RENDU	RUCKGELD	WISSELGELD
11	CASH	10	CASH	EFFECTIVO	ESPECES	BAR	CONTANT
12	TOTAL CASH	10	TL-CASH	T-EFFECTIVO	TL-ESPECE	TL-BARGELD	TL_CONTANT
13	PRICE	10	*PRICE*	"PRECIO"	PRIX	PREIS	PRIJS
14	AMOUNT	10	AMOUNT	CANTIDAD	MONTANT	BETRAG	BEDRAG
15	CHECK	10	CHECK	CHEQUE	CHEQUE	SCHECK	CHEQUE
16	TOTAL CHECK	10	TL-CHECK	TL-CHEQUE	TL-CHEQUE	TL-SCHECK	TL_CHEQUE
17	TOTAL	10	TOTAL	TOTAL	TOTAL	GESAMT	TOTAAL
18	TOTAL PLU	10	TL-PLU	TL-PLU	TL-PLU	TL-PLU	TL_PLU
19	TOTAL CLERK	10	TL-CLERK	TL-EMPLOY	TL-VENDEUR	TL-BED	TL_MEDEW.
20	NO SALE	10	NO SALE	NO VENTA	NON-VENTE	NULL BON	NIET-VERK
21	TOTAL NO SALE	10	TL-NS	TL-NON-VTA	TL-NON-VTE	TL- N BON	TL_NT-VERK
22	RECEIVED on ACCOUNT	10	RECDACCT	ACUENTA	ENTR...E	EINZAHLUNG	ONTV_REK
23	TOTAL RECEIVED on ACCOUNT	10	TL-RECDAC	TL-ACUENT	TL-ENTR...E	TL-EINZAHL	T_ONTV_REK
24	PAID OUT	10	PAID OUT	SALIDAS	SORTIE	AUSZAHLUNG	KASBETAL
25	TOTAL PAID OUT	10	T-PAID OUT	TL-SALIDAS	TL-SORTIE	TL-AUSZAHL	TL_KASBET
26	NON TAX	10	NON TAX	SIN IVA	SANSTVA	OHNE MWST	ZONDERBTW
27	NO USE TAX 1	10	TAX-1	TAX-1	TAX-1	TAX-1	BTW-1
28	NO USE TAX 2	10	TAX-2	TAX-2	TAX-2	TAX-2	BTW-2
29	TRANSFER	10	TRANSFER	TRANSFER.	TRANSFERT	TRANSFER	TRANSFER
30	TOTAL %1	10	TL-%1	TL-%1	TL-%1	TL-%1	TL-%1
31	TOTAL %2	10	TL-%2	TL-%2	TL-%2	TL-%2	TL-%2
32	TOTAL DEPARTMENT	10	DEPT TOTAL	TOTAL DPTO	TL-DEPT	WG TOTAL	TL_OMZETGR
33	REFUND	10	EFUND	REEMBOLSO	RETOUR	RUCKZAHLNG	RETOUR
34	NET	10	NET	NETO	NET	NETTO	NETTO
35	GROSS	10	GROSS	BRUTO	BRUT	BRUTTO	BRUTO
36	GRAND TOTAL	10	GT	GT	GT	GT	GT
37	TAXABLE with TAX	10	TXBL_W_	IMP C/IMP.	MT-TTC	VERST.m.ST	BELB_M
38	TAXABLE without TAX	10	TXBL_O_	IMP S/IMP.	MT-HT	VERST.o.ST	BELB_Z
39	TAX	10	VAT	IVA	TVA	MWS	BTW
40	TAX TOTAL	10	TL-VAT	TL-IVA	TL-TVA	TL-MWS	BTW_TL
41	TAXABLE TOTAL with TAX	10	TXBL_TL_W	T.IMP.C/I.	TL-TTC	TAX_TL_M	BELB_TL_M
42	TAXABLE TOTAL without TAX	10	TXBL_TL_O	T.IMP.S/I.	TL-HT	TAX_TL_O	BELB_TL_Z
43	Cash in Drawer	10	C-I-D	EFFECT CAJA	NET-TIROIR	G-I-S	KASGELD
44	CHECK in Drawer	10	CHECK ID	CHEQ.CAJA	CHEQUE-TIR	SCHECKS-IS	CHEQUE_KAS
45	CHARGE in Drawer	10	CHARGE ID	CARG.CAJA	CREDIT-TIR	LAST-IS	REKEN_KAS
46	CARD CREDIT 1 in Drawer	10	C CRED1 ID	CRD1.CAJA	C CRD1-TIR	KREDIT1-IS	CRED1_KAS

Line	Description	Digit	ENGLISH	ESPAÑOL	FRANÇAIS	DEUTSCH	NEDERLANDS
47	CARD CREDIT2 in Drawer	10	C CRED2 ID	CRD2. CAJA	C CRD2-TIR	KREDIT2-IS	CRED2_KAS
48	CARD CREDIT1	10	CARD 1	CREDITO1	CARTE1	KARTE 1	CREDIT1
49	CARD CREDIT 2	10	CARD 2	CREDITO2	CARTE2	KARTE 2	CREDIT2
50	ADJUST	10	ADJUST	AJUSTE	AJUST	ANPASSEN	AANPASS
51	DATE	10	DATE	FECHA	DATE	DATUM	DATUM
52	TIME	10	TIME	HORA	HEURE	ZEIT	TIJD
53	E.J. FREE LINE	6	L. EJ nnnn	L. DE nnnn	L. JE nnnn	L. EJ nnnn	EJ R nnnn
54	ELECTRONICJOURNALCLEAR	10	E.J.-FULL	D.E.SAT	J.E.-PLEIN	EJ VOLL	EJ VOL
55	RESET	10	EJ CLEAR	D.E.BORR.	REMA 0 JE	EJ L+SCH	EJ_GEWIST
56	PAPER END	10	RESET	PONER CERO	RE INITIAL	RESET	RESET
57	HEAD TEMPERATURE	10	PAPER END	FIN PAPEL	FIN PAPIER	PAPIERENDE	PAPIEROP
58	ERROR	10	HEAD TEMP	TEMP.CABZ.	TEMP TETE	KOPFTEMP	TEMP KOP
59	Over flow error	10	ERROR	ERROR	ERREUR	FEHLER	FOUT
60	0 price error	10	OVERFLOW	DESBORD.	E CAPACITE	EINGABE	OVERFLOW
61	Full void error (item over)	10	0 PRICE ER	ERR.PREC.0	E PRIX 0	PREIS 0	0 PRIJS FT
62	CLERK ERROR	10	FULL VD ER	ERR.ANL.C.	E NUL TICK	STOR VOLL	TOTWISFT
63	SECURITY CODE	10	CLERK ERR	ERR.CAJERO	ERR VEND	KASSFEHLER	FOUT MEDEW
64	MACHINE NUMBER	10	SEC CODE	COD SEGURI	COD SECRET	GEHEIMCODE	BEV_CODE
65	PRG/Z mode Manager	6	MC NO.	N. MAQ	No MC	MASCHN	MC NR.
66	PASSWORD	10	PRG/Z PASS	COD PRG/Z	COD PRG/Z	PRG/Z CODE	PRG/Z CODE
67	X mode Manager PASSWORD	10	X PASS	CODIGO X	CODE X	X CODE	X CODE
68	Training mode Manager PASSW.	10	T PASS	CODIGOT	CODE T	T CODE	T CODE
69	TAXn RATE	9	TAX RATE n	POR. IMP.n	TAUX TVA n	MWST SATZ n	BTW-TAR. N
70	FCn RATE	9	FC RATE n	CAMB.DIV.n	TX DEVISE n	KURS n	KOERS n
71	GRAND TOTAL PRESET	10	GT PRESET	PRE GT	PROGGT	GT PROG	PROGGT
72	PLU	3	PLU	PLU	PLU	ART	PLU
73	Department	4	DEPT	DEPT	DEPT	WRG	OMZG
74	Department Group	5	DPT-G	G-DPT	G-DEP	DPT-G	OMZ-G
75	CLERK	5	CLERK	CAJER	VEND	KASS	MEDEW
76	CLERK	3	CLK	CAJ	VDR	KAS	MWK
77	Receipt HEADER LINE	6	HEAD L	LT□T.	LH LOG	KOPFZ	KOP R
78	Receipt FOOTER LINE	6	FOOT L	L.PIE	LB LOG	FUSSZ	VOET R
79	FOREIGN CURRENCY	2	FC	DV	DE	FW	BV
80	Free Text (Short: 10 digits)	5	TXT-Snn	TXT-Cnn	TXT-Cnn	TXT-Knn	TXT-Knn
81	Free Text (Short: 24 digits)	5	TXT-Lnn	TXT-Lnn	TXT-Lnn	TXT-Lnn	TXT-Lnn
82	SYSTEM OPTION	7	SYS OPT	OPC.SIS	OPT.SYS	SYS OPT	SYS OPT
83	Program. COUPON	10	P COUPON	CUP. PROG.	P COUPON	P COUPON	PREDUCTIE
84	Program.AMOUNT DECIMAL POINT	10	PRG DEC P	POSIC.COMA	PRG DEC P	BETR.DEZI	D.P. HOEVH
85	Program.FRACTION ROUNDING	10	P ROUNDING	REDON.FRC.	P ARRONDI	P RUNDEN	PAFROND
86	STATUS	2	ST	ES	ST	ST	ST
87	SECURITY CODE	2	SC	CS	CS	SC	VC
88	PRICE	2	PR	PR	PX	PR	PR
89	Link Department	2	LD	VD	LD	LW	DK
90	GROUP	2	GR	GR	GR	GR	GR
91	EXP.	4	EXP.	EXP.	EXP.	EXP.	EXP.
92	Decimal Point	3	DP.	CD.	DP.	DP.	DP.

PRINT CAPTIONS

Line	Description	ENGLISH		ESPAÑOL			
1	E.J. USED LINE PRINT	E.JOURNAL USED	L	DIA	ELEC	USADO	L
2	E.J. FREE LINE PRINT	E.JOURNAL FREE	L	DIA	ELEC	LIBRE	L
3	REFUND	REFUND		REEMBOLSO			
4	CLERK REPORT HEAD	CLERK REPORT	X	INFORME	CAJERO		X
5	HOURLY REPORT HEAD	HOURLY REPORT	X	INFORME	HORA		X
6	E.J. REPORT HEAD	ELECTRIC JOURNAL	X	DIARIO	ELECTRONI		X
7	E.J. CLEAR PRINT	E. JOURNAL CLEAR	X	BORRAR	DIA	ELEC	X
8	PLU REPORT	PLU REPORT	X	INFORME	PLU		X
9	HOLD PRINT	HOLD		RETENER			
10	RECALL PRINT	RECALL		RECUPERAR			
11	FULL VOID PRINT	FULL VOID		ANULACION TOTAL			
12	RESET PRINT (n: Number of reset A - D)	< < < RESET	n > > >	< < < PONER A CERO n > > >			
13	POWER FAIL PRINT	!!!		!!!			
14	DEPARTMENT DUMP	DEPT * * ST. ssssss GR. gg		DEPT * * ES. ssssss GR. gg			
15	PLU DUMP	PLU * * * LD. ld		PLU * * * VD. ld			
16	CLERK DUMP	CLK * * ST. ssssssss SC. ccc		CAJ * * ES. ssssssss CS. ccc			
17	RECEIPT HEADER LINE.1	* * * * * * * * * * * * * * * *		* * * * * * * * * * * * * * * *			
18	RECEIPT HEADER LINE.2	* YOUR RECEIPT *		* SU RECIBO *			
19	RECEIPT HEADER LINE.3	* THANK YOU *		* GRACIAS *			
20	RECEIPT HEADER LINE.4	* * * * *		* * * * *			
21	RECEIPT HEADER LINE.5	* * * * * * * * * * * * * * * *		* * * * * * * * * * * * * * * *			
22	RECEIPT FOOTER LINE.1	~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~		~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~			
23	RECEIPT FOOTER LINE.2	HAVE A NICE DAY		QUE TENGA UN BUEN DIA			
24	RECEIPT FOOTER LINE.3	PLEASE COME AGAIN		VUELVA A VISITARNOS			
25	RECEIPT FOOTER LINE.4						
26	RECEIPT FOOTER LINE.5	~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~		~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~			

Line	Description	FRANÇAIS		DEUTSCH			
1	E.J. USED LINE PRINT	ELJ UTILISE	L	E. JOURN EIN		L	
2	E.J. FREE LINE PRINT	ELJ DISPONIBLE	L	E. JOURN FREI		L	
3	REFUND	RETOUR		RUCKZAHLUNG			
4	CLERK REPORT HEAD	RAPPORT VENDEUR	X	KASSIERER BERICHT		X	
5	HOURLY REPORT HEAD	RAPPORT HORAIRE	X	STUNDEN BERICHT		X	
6	E.J. REPORT HEAD	JOURNAL ELECTRO	X	ELECTRON JOURNAL		X	
7	E.J. CLEAR PRINT	REMISE O ELJ	X	E. JOURN LOESCHEN		X	
8	PLU REPORT	RAPPORT PLU	X	PLU - BERICHT		X	
9	HOLD PRINT	TICKET EN ATTENTE		ANHALTEN			
10	RECALL PRINT	RAPPEL TICKET		WEITER			
11	FULL VOID PRINT	ANNULLATION TICKET		VOLL NULL			
12	RESET PRINT (n: Number of reset A - D)	< < < REMISE A ZERO n > > >		< < < RESET n > > >			
13	POWER FAIL PRINT	!!!		!!!			
14	DEPARTMENT DUMP	DEPT * * ST. ssssss GR. gg		WRG * * ST. ssssss GR. gg			
15	PLU DUMP	PLU * * * LD. ld		ART * * * LK. ld			
16	CLERK DUMP	VDR * * ST. ssssssss SC. ccc		KAS * * ST. ssssssss SC. ccc			
17	RECEIPT HEADER LINE.1	* * * * * * * * * * * * * * * *		* * * * * * * * * * * * * * * *			
18	RECEIPT HEADER LINE.2	* VOTRE TICKET *		* IHRE RECHNUNG *			
19	RECEIPT HEADER LINE.3	* MERCI *		* VIELEN DANK *			
20	RECEIPT HEADER LINE.4	* * * * *		* * * * *			
21	RECEIPT HEADER LINE.5	* * * * * * * * * * * * * * * *		* * * * * * * * * * * * * * * *			
22	RECEIPT FOOTER LINE.1	~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~		~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~			
23	RECEIPT FOOTER LINE.2	BONNE JOURNEE		AUF WIEDERSEHEN			
24	RECEIPT FOOTER LINE.3	REVE NEZ NOUS VISITER		KOMMEN SIE BALD WIEDER			
25	RECEIPT FOOTER LINE.4						
26	RECEIPT FOOTER LINE.5	~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~		~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~			

Line	Description	NEDERLANDS	
1	E.J. USED LINE PRINT	E. JOURN. GEBRUIKT R	
2	E.J. FREE LINE PRINT	E. JOURN. VRIJ R	
3	REFUND	RETOUR	
4	CLERK REPORT HEAD	MEDEWERKER X	
5	HOURLY REPORT HEAD	TIJD X	
6	E.J. REPORT HEAD	ELEKTRON. JOURNAAL X	
7	E.J. CLEAR PRINT	E. JOURNAAL WISSEN X	
8	PLU REPORT	PLU	
9	HOLD PRINT	HOLD	
10	RECALL PRINT	RECALL	
11	FULL VOID PRINT	TOT WISSEN	
12	RESET PRINT (n: Number of reset A - D)	< < < RESET n > > >	
13	POWER FAIL PRINT	!!!	
14	DEPARTMENT DUMP	OMZG * * ST. sssss GR. gg	
15	PLU DUMP	PLU * * * DK. Id	
16	CLERK DUMP	MWK * * ST. sssssss VC. ccc	
17	RECEIPT HEADER LINE.1	* * * * * * * * * * * * * * *	
18	RECEIPT HEADER LINE.2	* UW KASSABON *	
19	RECEIPT HEADER LINE.3	* DANK U *	
20	RECEIPT HEADER LINE.4	* * * * * * * * * * * * * * *	
21	RECEIPT HEADER LINE.5	* * * * * * * * * * * * * * *	
22	RECEIPT FOOTER LINE.1	~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~	
23	RECEIPT FOOTER LINE.2	PRETTIGE DAG VERDER	
24	RECEIPT FOOTER LINE.3	TOT ZIENS	
25	RECEIPT FOOTER LINE.4		
26	RECEIPT FOOTER LINE.5	~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~ ~	

ENGLISH

Cash Register Specifications and Safety

Technical Characteristics

Listed below are the technical characteristics of this cash register model.

Type:	Electronic cash register with clamshell thermal printer, 99 departments, 15 clerks, up to 1,500 PLU settings and 7,200 line electronic journal
Displays:	Two 10-digit operator and client alphanumeric displays. Symbols for error, change, subtotal, minus, total, foreign currency value, electronic journal memory nearly full or full, and item count shown
Capacity:	8-digit input and readout
Printer:	24-column line thermal printer with drop-in paper loading
Paper supply:	57,5 ± 0.5 mm thermal paper
Batteries:	4 standard "AA" size batteries which safeguard memory contents in the event of power failures
Technology:	CMOS RAM
Power cons.:	Standby 10 W, Operating 25 W
Operating Temperature:	32 – 104 °F (0 °C – 40 °C)
Dimensions:	325 mm (W) x 425 mm (D) x 220 mm (H)
Weight:	4.9 Kg (10,7 lbs)

DEUTSCH

Registrierkasse: Technische Eigenschaften und Sicherheitshinweise

Technische Eigenschaften

Im folgenden sind technischen Eigenschaften dieses Registrierkassenmodells zusammengestellt.

Typ:	Elektronische Registrierkasse mit Thermodrucker, 99 Warengruppen, 15 Kassierern, bis zu 1.500 PLU-Einstellungen und Elektronischem Journal mit 7.200 Zeilen
Displays:	Zwei 10-stellige Kassierer- und Kundendisplays, Anzeige von Symbolen für Fehler, Rückgeld, Zwischensumme, Minus, Gesamtsumme, Fremdwährungswert, „Journalspeicher fast voll“ und Artikelanzahl
Kapazität:	8-stellige Eingabe und Ausgabe
Drucker:	Thermodrucker mit 24 Spalten und Papierschnellladen
Papier:	57,5 ± 0.5 mm Thermopapier
Batterien:	4 Standard "AA" Batterien zur Speicherhaltung bei Stromausfall
Technologie:	CMOS RAM
Stromverbrauch:	Bereitschaft 10 W, in Betrieb 25 W
Betriebs-temperatur:	0 °C – 40 °C
Abmessungen:	325 mm (W) x 425 mm (T) x 220 mm (H)
Gewicht:	4,9 Kg

FRANÇAIS

Spécifications techniques et de sécurité de la caisse enregistreuse

Caractéristiques techniques

Voici la liste des caractéristiques techniques de ce modèle de caisse enregistreuse.

Type:	Caisse Enregistreuse Electronique avec imprimante thermique à mécanisme "clamshell", 99 rayons, 15 vendeurs, jusqu'à 1.500 paramètres PLU et journal électronique à 7.200 lignes
Afficheurs:	Deux afficheurs alphanumériques à dix chiffres opérateur et client. Symboles pour erreur, change, sous-total, moins, total, valeur de la devise étrangère, mémoire du journal électronique presque pleine ou pleine, et compteur articles
Capacité:	8 chiffres en entrée
Imprimante:	Imprimante thermique avec 24-colonnes
Rouleau de papier:	57,5 ± 0,5 mm papier thermique
Piles:	4 piles standard "AA" pour la sauvegarde du contenu de la mémoire en cas de coupure de courant
Technologie:	CMOS RAM
Consommation:	Au repos 10 W, en fonction 25 W
Température de fonctionnement:	0 °C – 40 °C
Dimensions:	325 mm (L) x 425 mm (P) x 220 mm (H)
Poids:	4,9 Kg

ESPAÑOL

Descripciones y Seguridad de la Caja Registradora

Características Técnicas

Se han incluido a continuación las características técnicas de este modelo de caja registradora.

Tipo:	Caja registradora electrónica con impresora térmica pinza con 99 departamentos, 15 cajeros, hasta 1.500 entradas de PLU y diario electrónico de 7.200 líneas
Pantallas:	Dos Pantallas cajero y cliente alfanuméricas de 10 caracteres. Visualización de símbolos para error, cambio, subtotal, menos, total, valor divisa extranjera, memoria del diario electrónico casi llena o llena, y recuento de artículos
Capacidad:	Introducción y lectura de 8 dígitos
Impresora:	Impresora térmica de 24 columnas por línea con carga del rollo "drop-in"
Soporte papel:	Papel térmico de 57,5 ± 0,5 mm
Pilas:	4 pilas estándar formato "AA" que protegen el contenido de la memoria en caso de fallos de corriente
Tecnología:	CMOS RAM
Cons. corriente:	Standby 10 W, Operando 25 W
Temp. operativa:	0 °C – 40 °C
Dimensiones:	325 mm (A) x 425 mm (P) x 220 mm (H)
Peso:	4,9 Kg

NEDERLANDS

Specificaties en veiligheid

Technische eigenschappen

Hieronder vindt u de technische eigenschappen van dit model kasregister.

Type:	Elektronisch kasregister met clamshell thermische printer, 99 omzetgroepen, 15 medewerkers, maximaal 1.500 PLU-instellingen en elektronische journaal met maximaal 7.200 regels
Displays:	Twee 10-cijferige displays, voor medewerker en klant. Symbolen voor fouten, wisselgeld, sub-totaal, korting, totaal, valuta-conversie, elektronisch journaalgeheugen bijna vol of vol, en aantal artikelen
Capaciteit:	8 cijfers invoer en uitlezen
Printer:	Thermisch, 24 tekens per regel met drop-in papier toevoer
Papier:	57,5 ± 0,5 mm rol thermisch papier
Batterijen:	4 standaard "AA" batterijen die de inhoud van het geheugen waarborgen bij stroom uitval
Technologie:	CMOS RAM
Stroomverbruik:	Standby 10 W, bij gebruik 25 W
Bedrijfs-temperatuur:	0 °C – 40 °C
Afmetingen:	325 mm (B) x 425 mm (D) x 220 mm (H)
Gewicht:	4,9 Kg

PORTUGUÊS

Especificações e Segurança da Caixa Registradora

Características Técnicas

Abaixo estão descritas as características técnicas deste modelo de caixa registradora.

Tipo:	Caixa registradora electrónica com impressora térmica, 99 departamentos, 15 funcionários, até 1.500 PLU programáveis e registo electrónico com 7.200 linhas
Visores:	Dois visores alfanuméricos de 10 dígitos, um para o operador e outro para o cliente. Símbolos para erro, troco, subtotal, menos, total, valor em moeda estrangeira, memória de registo electrónico quase cheia ou cheia e número de itens
Capacidade:	Entrada e leitura de 8 dígitos
Impressora:	Impressora térmica de linhas a 24 colunas
Abastecimento de papel:	Papel térmico de 57,5 ± 0,5 mm
Pilhas:	4 pilhas normais de formato "AA" que mantêm o conteúdo da memória no caso de falhas de corrente.
Tecnologia:	CMOS RAM
Consumo de energia:	Em espera 10 W, Em Operação 25 W
Temperatura de Operação:	0 °C – 40 °C
Dimensões:	325 mm (L) x 425 mm (P) x 220 mm (A)
Peso:	4,9 Kg

DANSK

Kasseapparatets specifikationer og sikkerhed

Tekniske specifikationer

Nedenfor finder de kasseapparatets tekniske specifikationer.

Type:	Den elektroniske kasseapparat med en muslingeskalkformet termoprinter, 99 Varegrupper, 15 ekspedienter, op til 1.500 PLU indstillinger og 7.200 linjer elektronisk journal
Displays:	To 10-cifrede alfanumeriske ekspedient og kundedisplays. Symboler for fejl, byttepenge, subtotal, minus, total, beløb i udenlandsk valuta, elektronisk journal hukommelse næsten fuld eller fuld og varetæller
Kapacitet:	8-cifret indtastning og aflæsning
Printer:	24 kolonne linier termoprinter med drop-in papirfremføring
Papir:	57,5 ± 0,5 mm termopapir
Batterier:	4 stk. standard AA batterier, der beskytter hukommelsen i tilfælde af strømsvigt
Teknik:	CMOS RAM
Forbrug:	Standby 10 W, i drift 25 W
Driftstemperatur:	0 °C til 40 °C
Mål:	325 mm (B) x 425 mm (L) x 220 mm (H)
Vægt:	4,9 Kg

SWENSKA

Kassaregisterspecifikationer och säkerhet



Tekniska egenskaper

Nedan beskrivs de tekniska egenskaperna för den här kassaregistermodellen.

Typ:	Elektroniskt kassaregister med termisk skrivare av clamshell-typ, 99 varugrupper, 15 expediter, upp till 1.500 PLU inställningar och en 7.200 raders elektronisk journal
Displayer:	Två alfanumeriska 10-siffriga Displayer för operatör resp kund. Symboler för fel, byttepengar, delsumma, minus, total, belopp i utländsk valuta, elektronisk journal med minne nästan fullt eller fullt, samt visning av antal artiklar
Kapacitet:	8-siffrig inknappning och avläsning
Skrivare:	24-teckens termisk skrivare med drop-in pappersladdning
Papper:	57,5 ± 0,5 mm värmekänsligt papper
Batterier:	4 standard AA batterier vilka skyddar innehållet i minnet i fall av strömavbrott
Teknik:	CMOS RAM
Strömförbrukning:	Standby 10 W, i drift 25 W
Driftstemperatur:	0 °C – 40 °C
Mått:	325 mm (B) x 425 mm (L) x 220 mm (H)
Vikt:	4,9 Kg

FIGURES - IMAGES ABBILDUNGEN - FIGURAS AFBEELDINGEN - FIGURAS FIGURER - BILDER

6

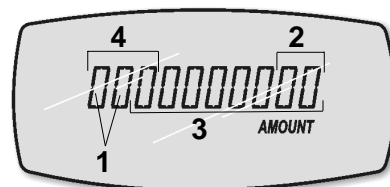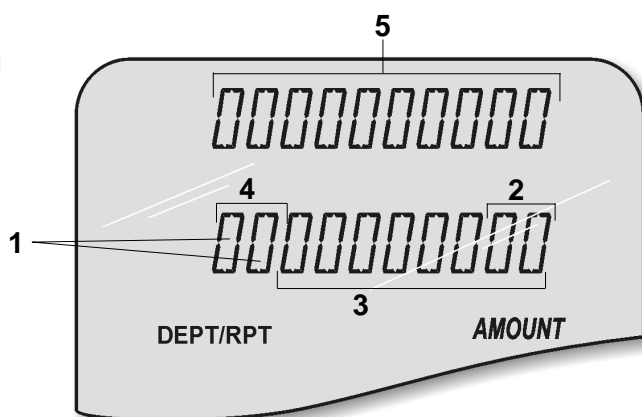

7

Character Table
Tableau des Caractères
Zeichentabelle
Tabla de Caracteres

Non CAPS	1	2	3	4	5	6	7	8	9	10
[a]	a	á	à	â	ã	ä	1			
[b]	b	2								
[c]	c	ç	ó	3						
[d]	d	4								
[e]	e	é	ê	è	é	ê	è	5		
[f]	f	6								
[g]	g	g	7							
[h]	h	8								
[i]	i	í	ì	9						
[j]	j	0								
[k]	k									
[l]	l	l								
[m]	m									
[n]	n	ñ	ñ							
[o]	o	ó	ô	ö	ò	ó	ô	ó	ö	ó
[p]	p	p								
[q]	q									
[r]	r									
[s]	s	\$	é							
[t]	t									
[u]	u	ú	ü	ü	ü	ü	ü			
[v]	v									
[w]	w									
[x]	x									
[y]	y									
[z]	z	z	z							
[0]	1	2	3	4	5	6	7	8	9	10
	!	"	#	\$	%	&	'	()	*
	11	12	13	14	15	16	17	18	19	20
	+	,	-	.	/	:	;	<	=	>
	21	22								
	?	,								

Tekencodetabel
Tabela de Caracteres
Karakterkode Tabel
Teckentabell

CAPS	1	2	3	4	5	6	7	8	9	10
[A]	A	Á	À	Â	Ã	Ä	Å	Ä	1	
[B]	B	2								
[C]	C	Ç	Ó	Ç	3					
[D]	D	Ø	4							
[E]	E	É	Ê	É	Ê	Ê	Ê	5		
[F]	F	6								
[G]	G	Ġ	Ġ	7						
[H]	H	8								
[I]	I	Í	Ì	Î	Ï	9				
[J]	J	0								
[K]	K									
[L]	L	Ł								
[M]	M									
[N]	N	Ñ	Ñ							
[O]	O	Ó	Ô	Õ	Ö	Ó	Ô	Õ		
[P]	P									
[Q]	Q									
[R]	R									
[S]	S	Š	Š	Š						
[T]	T									
[U]	U	Ú	Û	Ü	Ü	Ü	Ü			
[V]	V									
[W]	W									
[X]	X									
[Y]	Y	Ý								
[Z]	Z	Ž	Ž							
[0]	1	2	3	4	5	6	7	8	9	10
	@	[\]	^	_	{		}	~
	11	12	13	14	15	16	17	18	19	20
	¡	§	→	←	Σ	Ø	Æ	Œ	™	¿
	21	22	23	24	25	26	27			
	I	II	III	Γ	J	↑	.			

DIRECTIVE 2002/96/CE ON THE TREATMENT, COLLECTION, RECYCLING AND DISPOSAL OF ELECTRIC AND ELECTRONIC DEVICES AND THEIR COMPONENTS

1. FOR COUNTRIES IN THE EUROPEAN UNION (EU)

The disposal of electric and electronic devices as solid urban waste is strictly prohibited: it must be collected separately. The dumping of these devices at unequipped and unauthorized places may have hazardous effects on health and the environment.

Offenders will be subjected to the penalties and measures laid down by the law.

TO DISPOSE OF OUR DEVICES CORRECTLY:

- Contact the Local Authorities, who will give you the practical information you need and the instructions for handling the waste correctly, for example: location and times of the waste collection centres, etc.
- When you purchase a new device of ours, give a used device similar to the one purchased to our dealer for disposal.



The crossed dustbin symbol on the device means that:

- When it is to be disposed of, the device is to be taken to the equipped waste collection centres and is to be handled separately from urban waste;
- Olivetti guarantees the activation of the treatment, collection, recycling and disposal procedures in accordance with Directive 2002/96/CE (and subsequent amendments).

2. FOR OTHER COUNTRIES (NOT IN THE EU)

The treatment, collection, recycling and disposal of electric and electronic devices will be carried out in accordance with the laws in force in the country in question.

DIRECTIVE 2002/96/CE SUR LE TRAITEMENT, LA COLLECTE, LE RECYCLAGE ET LA MISE AU REBUT DES EQUIPEMENTS ELECTRIQUES ET ELECTRONIQUES ET DE LEURS COMPOSANTS

1. POUR LES PAYS DE L'UNION EUROPEENNE (UE)

Il est interdit de mettre au rebut tout équipement électrique ou électronique avec les déchets municipaux non triés : leur collecte séparée doit être effectuée. L'abandon de ces équipements dans des aires non appropriées et non autorisées peut nuire gravement à l'environnement et à la santé. Les transgresseurs s'exposent aux sanctions et aux dispositions prévues par la loi.

POUR METTRE CORRECTEMENT NOS EQUIPEMENTS AU REBUT, VOUS POUVEZ EFFECTUER L'UNE DES OPERATIONS SUIVANTES :

- Adressez-vous aux autorités locales, qui vous fourniront des indications et des informations pratiques sur la gestion correcte des déchets (emplacement et horaire des déchetteries, etc.).
- A l'achat d'un de nos équipements, remettez à notre revendeur un équipement usagé, analogue à celui acheté.



Le symbole du conteneur barré, indiqué sur l'équipement, a la signification suivante :

- Au terme de sa durée de vie, l'équipement doit être remis à un centre de collecte approprié, et doit être traité séparément des déchets municipaux non triés.
- Olivetti garantit l'activation des procédures de traitement, de collecte, de recyclage et de mise au rebut de l'équipement, conformément à la Directive 2002/96/CE (et modifications successives).

2. POUR LES AUTRES PAYS (NON UE)

Le traitement, la collecte, le recyclage et la mise au rebut des équipements électriques et électroniques doivent être effectués conformément à la loi en vigueur dans chaque pays.

DIRECTIVA 2002/96/CE RELATIVA AO TRATAMENTO, RECOLHA, RECICLAGEM E ELIMINAÇÃO DE RESÍDUOS DE EQUIPAMENTOS ELÉTRICOS E ELECTRÓNICOS E DE SEUS COMPONENTES

1. PARA OS PAÍSES DA UNIÃO EUROPEIA (UE)

É proibido eliminar qualquer resíduo de equipamentos eléctricos ou electrónicos como lixo sólido urbano: é obrigatório efectuar uma recolha separada. O abandono de tais equipamentos em locais não especificamente preparados e autorizados, pode ter efeitos perigosos sobre o ambiente e a saúde. Os transgressores estão sujeitos às sanções e às disposições legais.

PARA ELIMINAR CORRECTAMENTE OS NOSSOS EQUIPAMENTOS, É POSSÍVEL:

- Dirigir-se às Autoridades Locais que fornecerão indicações e informações práticas sobre a gestão correcta dos resíduos, por exemplo: local e horário dos centros de entrega, etc.
- Na compra de um nosso novo equipamento, devolver ao nosso Revendedor um equipamento usado, semelhante ao comprado.



O símbolo do contentor riscado, indicado sobre o equipamento, significa que:

- O equipamento, quando chegar ao fim de sua vida útil, deve ser levado para centros de recolha aparelhados e deve ser tratado separadamente dos resíduos urbanos;
- A Olivetti garante a activação dos procedimentos no tocante ao tratamento, recolha, reciclagem e eliminação do equipamento em conformidade com a Directiva 2002/96/CE (e mod. post.).

2. PARA OS OUTROS PAÍSES (FORA DA UE)

O tratamento, a recolha, a reciclagem e a eliminação de equipamentos eléctricos e electrónicos terão de ser realizados em conformidade com as Leis em vigor em cada país.

RICHTLIJN 2002/96/EG BETREFFENDE AFGEDANKTE ELEKTRISCHE EN ELEKTRONISCHE APPARATUUR

1. VOOR DE LANDEN VAN DE EUROPESE UNIE (EU)

Het is verboden om elektrische en elektronische apparatuur als huishoudelijk afval te verwerken: het is verplicht om een gescheiden inzameling uit te voeren. Het achterlaten van dergelijke apparatuur op plekken die niet specifiek hiervoor erkend en ingericht zijn, kan gevaarlijke gevolgen voor het milieu en de veiligheid met zich meebrengen. Overtreders zijn onderworpen aan sancties en maatregelen krachtens de wet.

OM OP CORRECTE WIJZE ONZE APPARATUUR TE VERWERKEN KUNT U:

- Zich wenden tot de plaatselijke instanties die u aanwijzingen en praktische informatie over de correcte behandeling van het afval zullen verschaffen, zoals bijvoorbeeld: locatie en openingstijden van de inzamelcentra, enz.
- Bij aankoop van een nieuw apparaat van ons merk, het oude apparaat, dat gelijk moet zijn aan het gekochte apparaat bij onze wederverkoper inleveren.



Het symbool van de doorgekruiste vuilnisbak, aangebracht op de apparatuur, betekent dat:

- Het apparaat aan het einde van zijn levensduur bij geoutilleerde inzamelcentra moet worden ingeleverd en gescheiden van het huishoudelijk afval moet worden verwerkt;
- Olivetti de activering garandeert van de procedures inzake behandeling, inzameling, recycling en verwerking van de apparatuur conform de Richtlijn 2002/96/EG (en latere wijzigingen).

2. VOOR DE OVERIGE LANDEN (NIET EU)

De behandeling, de inzameling, de recycling en de verwerking van elektrische en elektronische apparatuur dienen overeenkomstig de wetten die in elk land van kracht zijn te gebeuren.

EU-DIREKTIV 2002/96/EF (WEEE) OM OPSAMLING, GENBRUG OG BORTSKAFFELSE AF ELEKTRISK OG ELEKTRONISK Udstyr

1. GÆLDENDE FOR EU-LANDE

Det er forbudt at bortskaffe elektrisk eller elektronisk udstyr som almindeligt husholdningsaffald: Det skal opsamlles separat. Hvis ikke elektrisk og elektronisk affald afleveres på særligt indrettede opsamlingssteder, kan det få alvorlige konsekvenser for miljø og helbred. Overtredere kan straffes og retfølges i henhold til gældende lovgivning.

FOR KORREKT BORTSKAFFELSE AF VORES Udstyr KAN DU:

- Henvende dig til de lokale myndigheder, som vil kunne give dig anvisninger og praktiske oplysninger om en korrekt bortskaffelse af affaldet, f.eks.: Genbrugsstationers adresser og åbningstider osv.
- Afleverer brugt udstyr ved køb af tilsvarende nyt udstyr hos vores Forhandler.



Det viste symbol, som findes på udstyret, betyder:

- At, brugt udstyr skal afleveres på særlige opsamlingssteder og bortskaffes separat;
- At, Olivetti garanterer at procedurerne for behandling, opsamling, genbrug og bortskaffelse af udstyret i henhold til EU-direktiv 2002/96/EF (og efterfølgende tilføjelser) efterleves.

2. GÆLDENDE FOR IKKE EU-LANDE

Behandling, opsamling, genanvendelse og bortskaffelse af elektrisk og elektronisk udstyr skal ske i henhold til landets gældende lovgivning.

DIREKTIV 2002/96/EC AVSEENDE HANTERING, UPPSAMLING, ÅTERVINNING OCH BORTSKAFFNING AV ELEKTRO- OCH ELEKTRONIKUTRUSTNINGAR SAMT DERAS KOMPONENTER

1. AVSEENDE LÄNDERNA I DEN EUROPEISKA UNIONEN (EU)

Det är förbjudet att skaffa bort all slags elektro- och elektronikutrustning som fast stadsavfall: en separat uppsamling måste obligatoriskt göras. Avlämning av sådan utrustning på ej specifikt förberedda platser kan farligt påverka både miljön och hälsan. De som överträder dessa förordningar kommer att undergå de straff och påföljder som förutsätts i lagstiftningen.

FÖR EN KORREKT BORTSKAFFNING AV VÅR UTRUSTNING KAN DU BETE DIG PÅ FÖLJANDE SÄTT:

- Vänd dig till de lokala myndigheterna där du kan få praktisk anvisning och information om hur du ska gå tillväga för att kunna hantera avfallen på korrekt sätt, t.ex.: plats och öppettider i avlämningsstationer, osv.
- När du köper en ny utrustning från oss kan du lämna tillbaka en begagnad utrustning liknande den nyköpta till återförsäljaren.



Symbolen med den korsade behållaren som visas på utrustningen anger att:

- När utrustningens livslängd gått ut, måste denna föras till organiserade uppsamlingscentraler och behandlas separat från stadsavfallen;
- Olivetti garanterar aktivering av procedurer avseende hantering, uppsamling, återvinning och bortskaffning i överensstämmelse med Direktivet 2002/96/CE (och efterföljande ändringar).

2. AVSEENDE ÖVRIGA LÄNDER (EJ INOM EU)

Hantering, uppsamling, återvinning och bortskaffning av elektro- och elektronikutrustningar ska utföras i överensstämmelse med lagstiftelsen i landet i frågan.

RICHTLINIE 2002/96/CE FÜR DIE BEHANDLUNG, SAMMLUNG, WIEDERVERWERTUNG UND ENTSORGUNG VON ELEKTRO- UND ELEKTRONIK ALTGERÄTEN UND DEREN BESTANDTEILE

1. FÜR DIE LÄNDER DER EUROPÄISCHEN UNION (EG)

Es ist verboten, jede Art von Elektro- und Elektronik-Altgeräten als unsortierten Siedlungsabfall zu entsorgen: es ist Pflicht, diese separat zu sammeln. Das Abladen dieser Geräte an Orten, die nicht speziell dafür vorgesehen und autorisiert sind, kann gefährliche Auswirkungen für Umwelt und Gesundheit haben. Widerrechtliche Vorgehensweisen unterliegen den Sanktionen und Maßnahmen laut Gesetz.

UM UNSERE GERÄTE ORDNUNGSGEMÄß ZU ENTSORGEN, KÖNNEN SIE:

- Sich an die örtliche Behörde wenden, die Ihnen praktische Auskünfte und Informationen für die ordnungsgemäße Verwaltung der Abfälle liefert, beispielsweise: Ort und Zeit der Sammelstation etc.
- Beim Neukauf eines unserer Geräte ein benutztes Gerät, das dem neu gekauften entspricht, an unseren Wiederverkäufer zurückgeben.



Das durchgekruzte Symbol auf dem Gerät bedeutet, dass:

- Nach Ableben des Gerätes, dieses in ausgerüstete Sammelzentren gebracht werden und separat von Siedlungsabfällen behandelt werden muss;
- Olivetti die Aktivierung der Behandlungs-, Sammel-, Wiederverwertungs- und Entsorgungsprozeder der Geräte in Konformität mit der Richtlinie 2002/96/CE (u. folg.mod.) garantiert.

2. FÜR DIE ANDEREN LÄNDER (NICHT-EG-STAATEN)

Das Behandeln, Sammeln, Wiederverwerten und Entsorgen von Elektro- und Elektronik-Altgeräten muss nach den geltenden Vorschriften des jeweiligen Landes erfolgen.

DIRECTIVA 2002/96/CE SOBRE EL TRATAMIENTO, LA RECOGIDA, EL RECICLAJE Y LA ELIMINACIÓN DE APARATOS ELÉCTRICOS Y ELECTRÓNICOS Y DE SUS OMPONENTES

1. PARA LOS PAÍSES DE LA UNIÓN EUROPEA (UE)

Está prohibido eliminar cualquier tipo de aparato eléctrico y electrónico como residuo urbano no seleccionado: en el caso de estos equipos es obligatorio realizar su recogida selectiva. La eliminación de estos aparatos en lugares que no estén específicamente preparados y autorizados puede tener efectos peligrosos para el medio ambiente y la salud. Los transgresores están sujetos a las sanciones y a las medidas que establece la Ley.

PARA ELIMINAR CORRECTAMENTE NUESTROS APARATOS EL USUARIO PUEDE:

- Dirigirse a las Autoridades Locales, que le brindarán las indicaciones y las informaciones prácticas necesarias para el correcto manejo de los desechos, por ejemplo: lugar y horario de las instalaciones de tratamiento, etc.
- En el momento de comprar uno de nuestros equipos nuevos, puede entregar a nuestro Revendedor un aparato usado, similar al que ha adquirido.



El símbolo del contenedor con la cruz, que se encuentra en el aparato, significa que:

- Cuando el equipo haya llegado al final de su vida útil, deberá ser llevado a los centros de recogida previstos, y que su tratamiento debe estar separado del de los residuos urbanos;
- Olivetti garantiza la activación de los procedimientos en materia de tratamiento, recogida, reciclaje y eliminación de los equipos, de conformidad con la Directiva 2002/96/CE (y suces. mod.).

2. PARA LOS OTROS PAÍSES (FUERA DE LA UE)

El tratamiento, la recogida, el reciclaje y la eliminación de equipos eléctricos y electrónicos se deberán llevar a cabo de conformidad con las Leyes vigentes en cada País.

